

Audio Front Control Module (ACM)

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: Left hand drive (LHD) shown, right hand drive (RHD) similar.

- NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.


Using a diagnostic scan tool, begin the PMI process for the ACM following the on-screen instructions.

- Release the clips and remove the passenger side footwell trim panel.

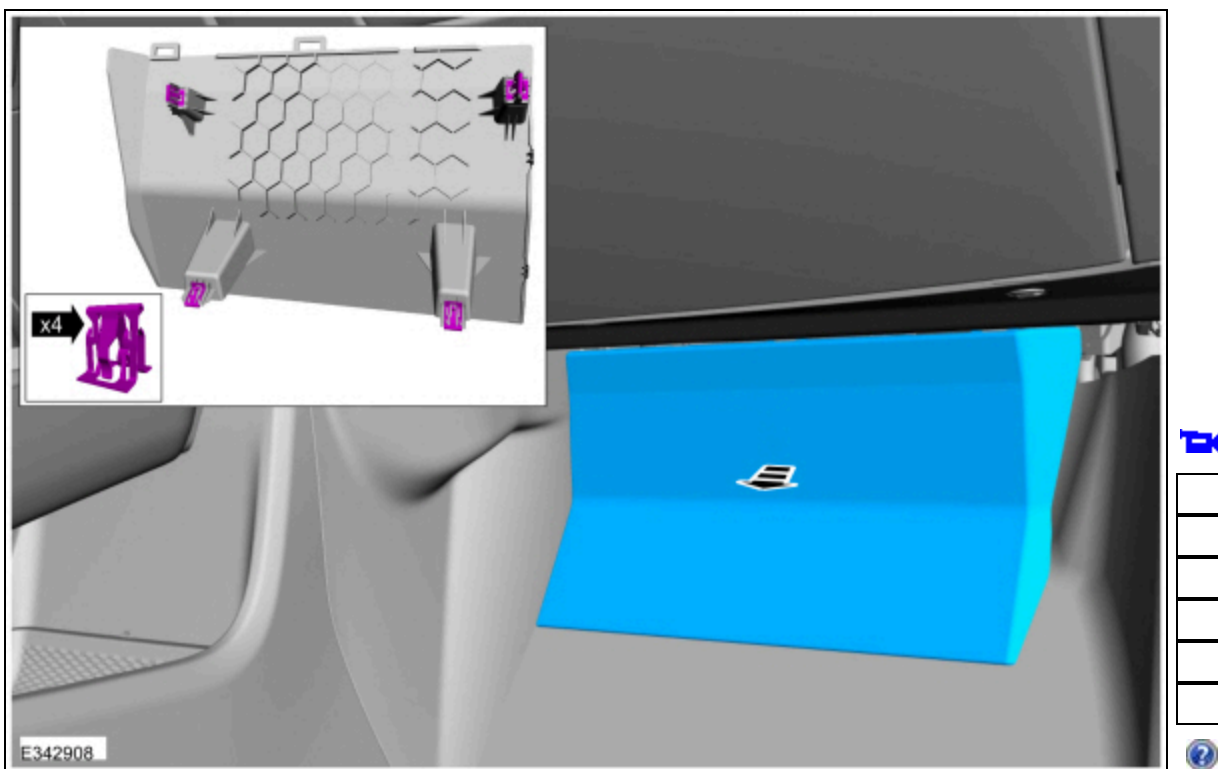

- NOTE:** Pull outward then rearward to remove.


Release the clips and remove the passenger side floor console front trim panel.

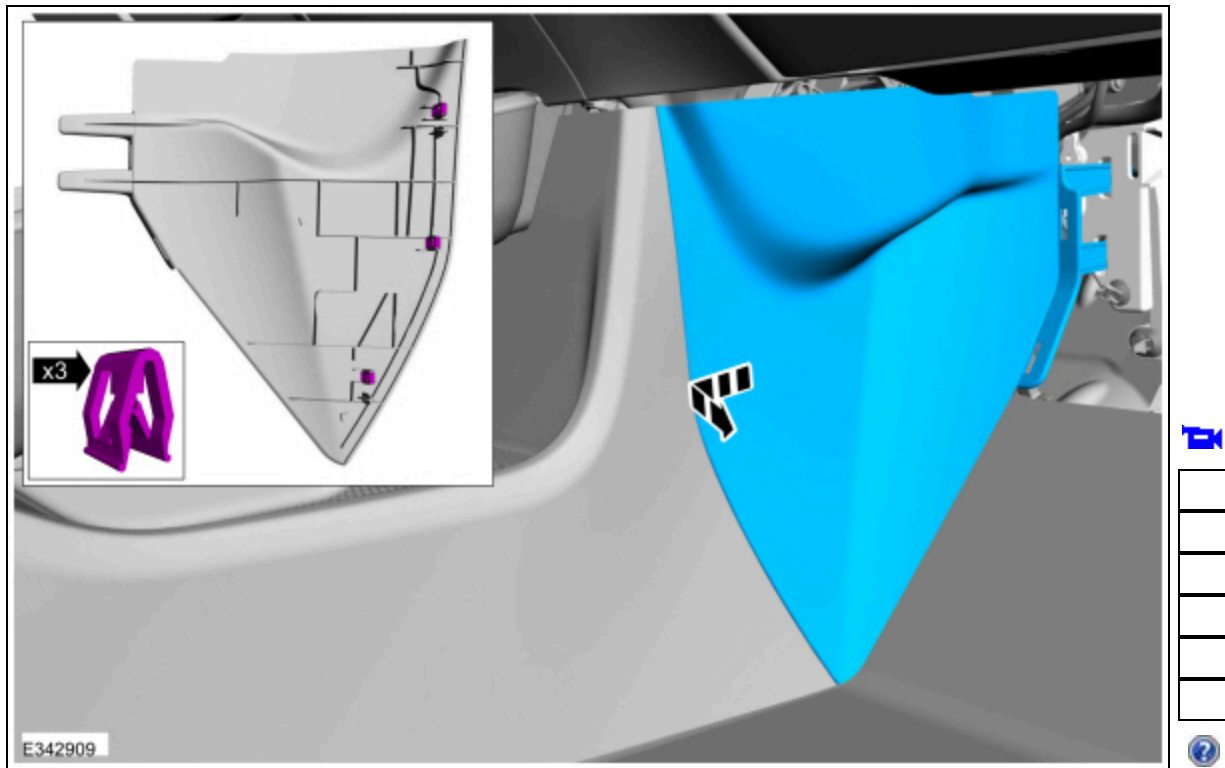

4.
 1. Remove the trim cover.
 2. Remove the bolt.
Torque: 22 lb.in (2.5 Nm)


3. **NOTE:** Pull outward then rearward to remove.

Release the clips and remove the driver side floor console front trim panel.

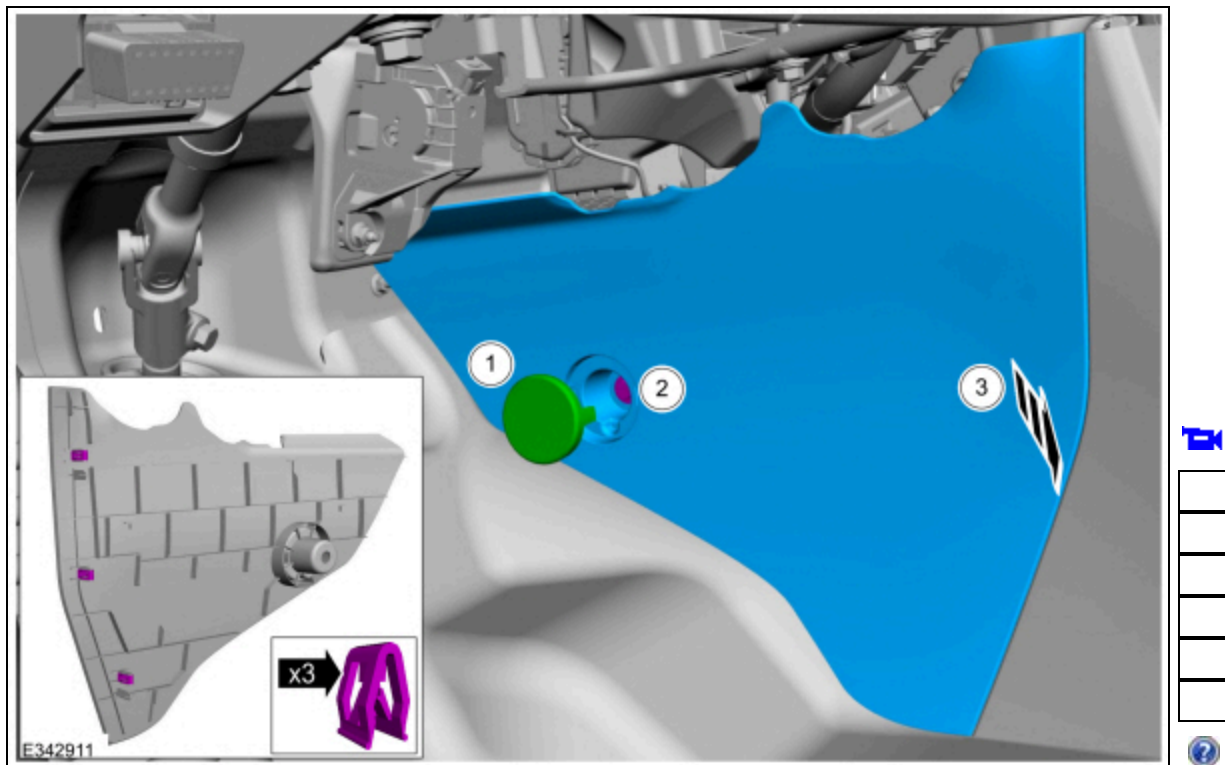


5. Remove the brake pedal and bracket.
Refer to: [Brake Pedal and Bracket](#) (206-06 Hydraulic Brake Actuation, Removal and Installation).



6. Disconnect the electrical connectors.

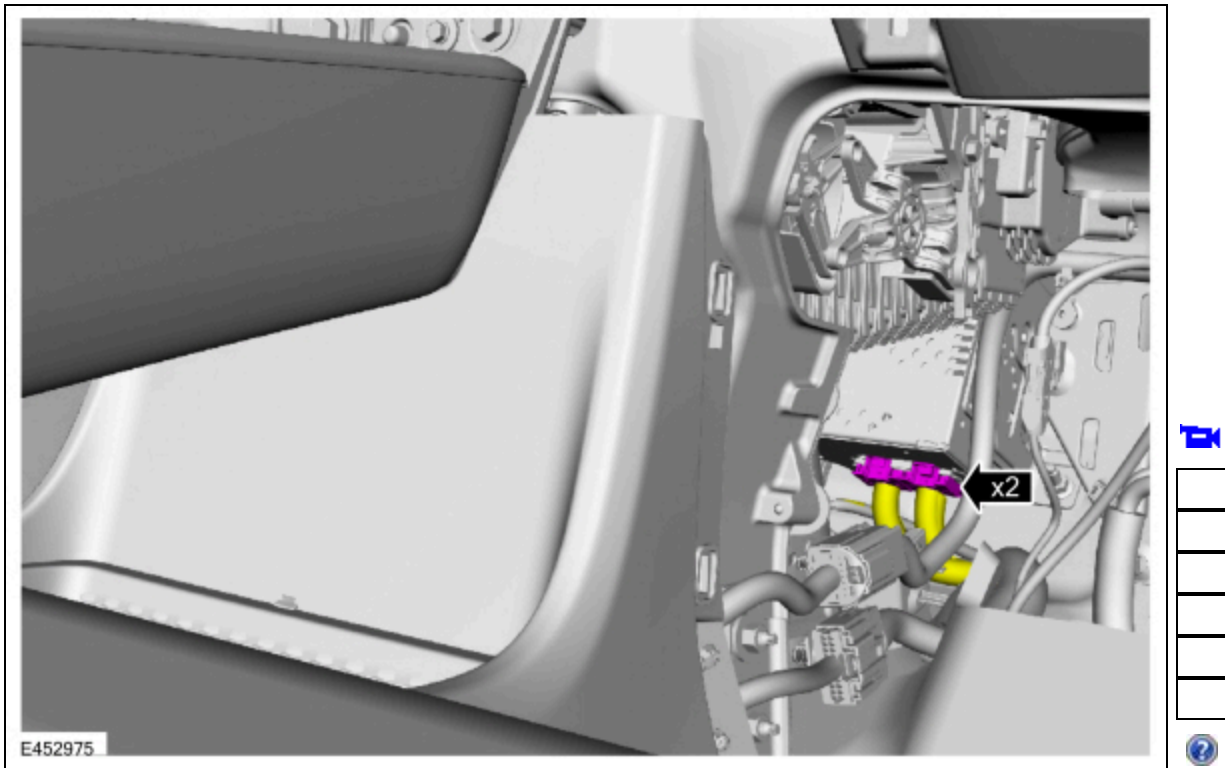



7. Remove the nuts.

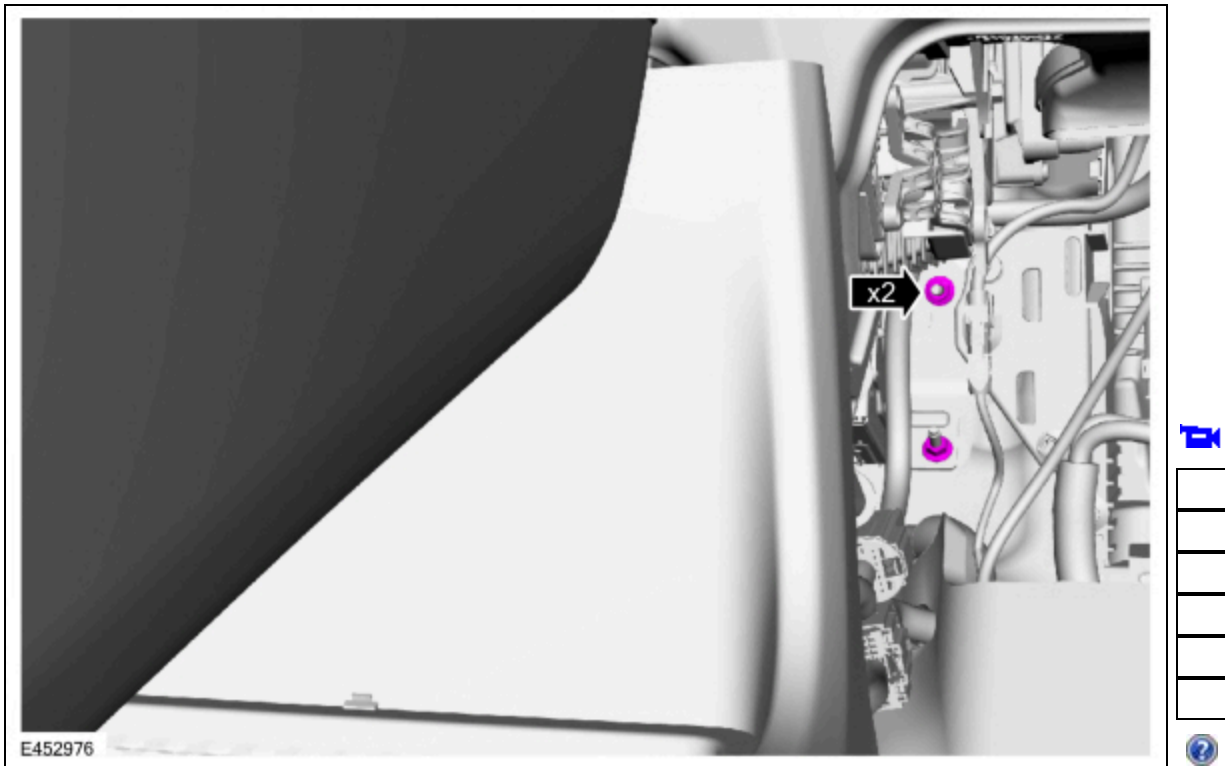

 
8. Remove the retainer and position the carpet aside.

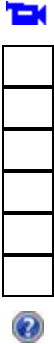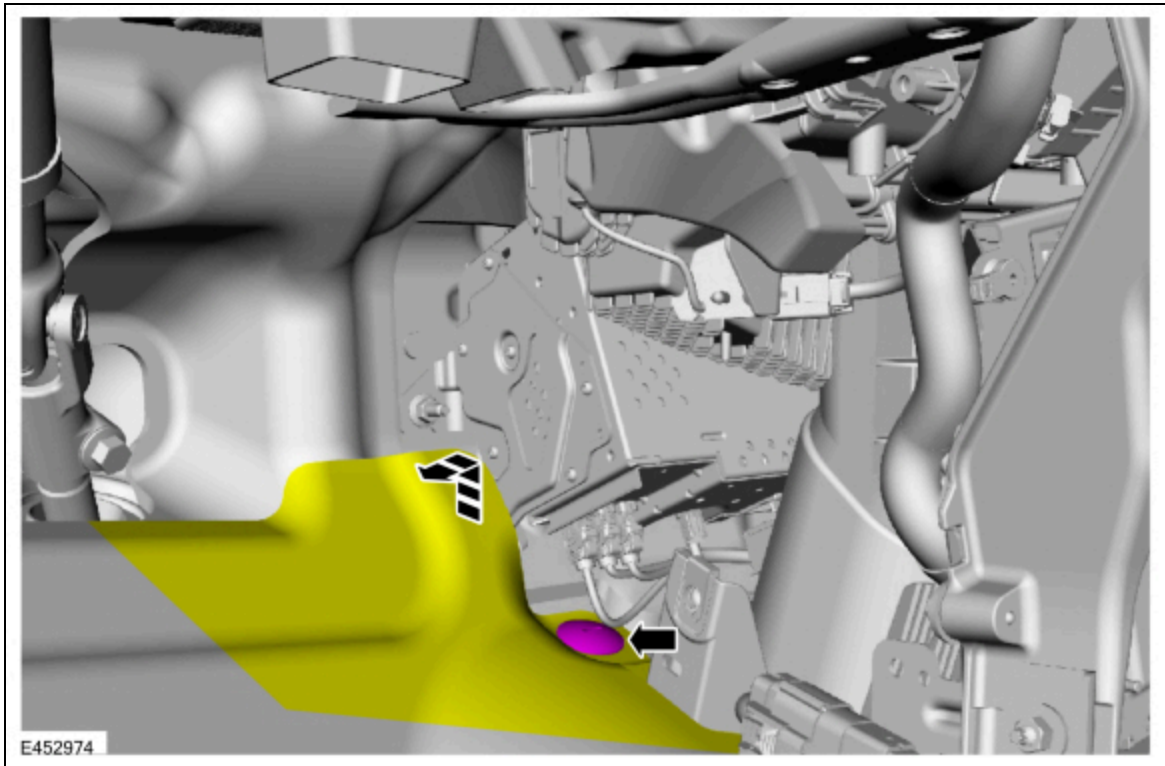

 9. Disconnect the electrical connectors.

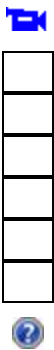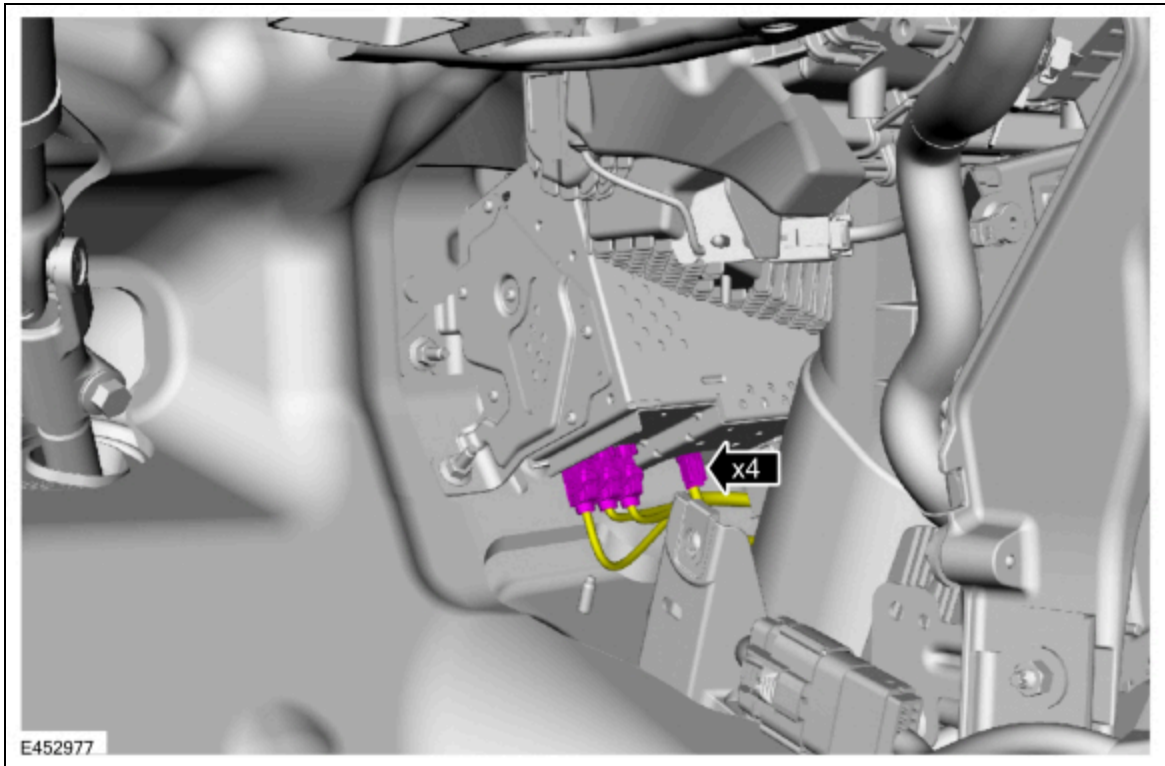

10. Remove the nuts and the ACM .

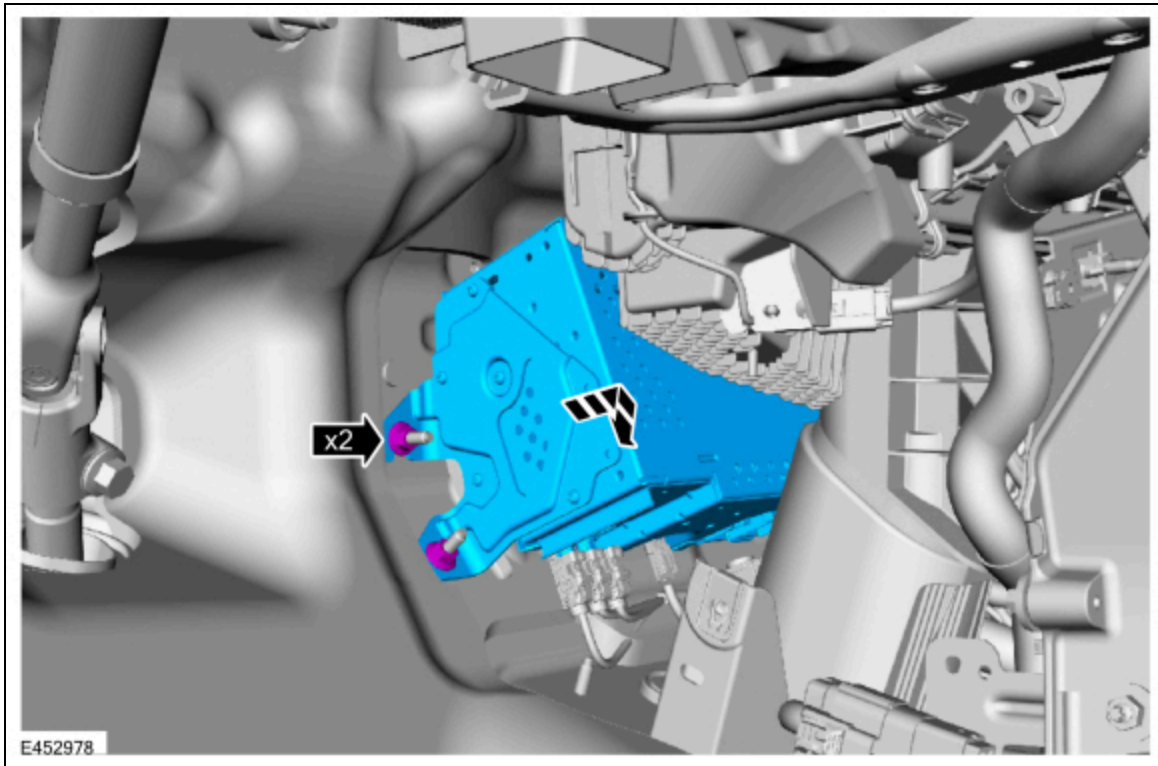

Installation

1. To install, reverse the removal procedure.

2. **NOTE:** *This step is only necessary when installing a new component.*

Using a diagnostic scan tool, complete the PMI process for the ACM following the on-screen instructions.

3. **NOTE:** *This step is only necessary when installing a new component.*

Using a diagnostic scan tool, run the ACM -Enable Engine Sound Enhancement and Active Noise Control application following the on-screen instructions.