

A-Pillar Trim Panel



Special Tool(s) / General Equipment




Interior Trim Remover

Removal

NOTE: *Left hand drive (LHD) shown, right hand drive (RHD) similar.*

NOTE: *Left hand (LH) shown, right hand (RH) similar.*



1. Disconnect the tether clips from the A-pillar trim panel.
 1. Release the A-pillar trim panel clip from the tether clips.
 2. Rotate the tether clip lines to align the ends with openings.
 3. Slide the tether clip ends out of the A-pillar trim panel.

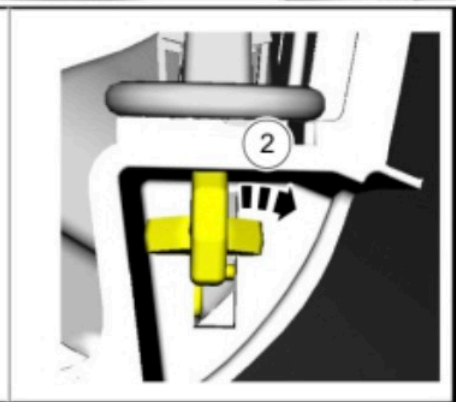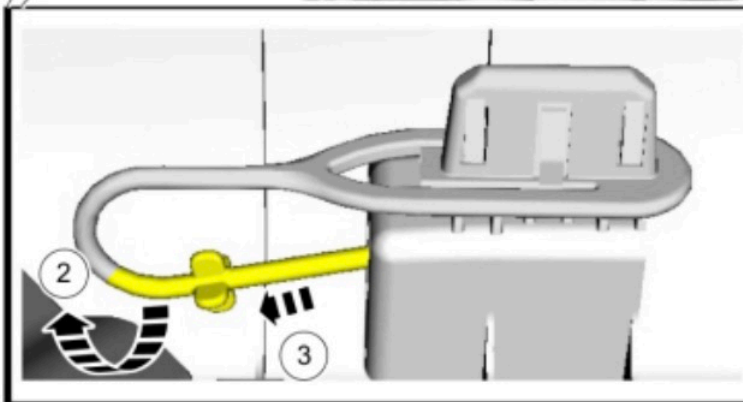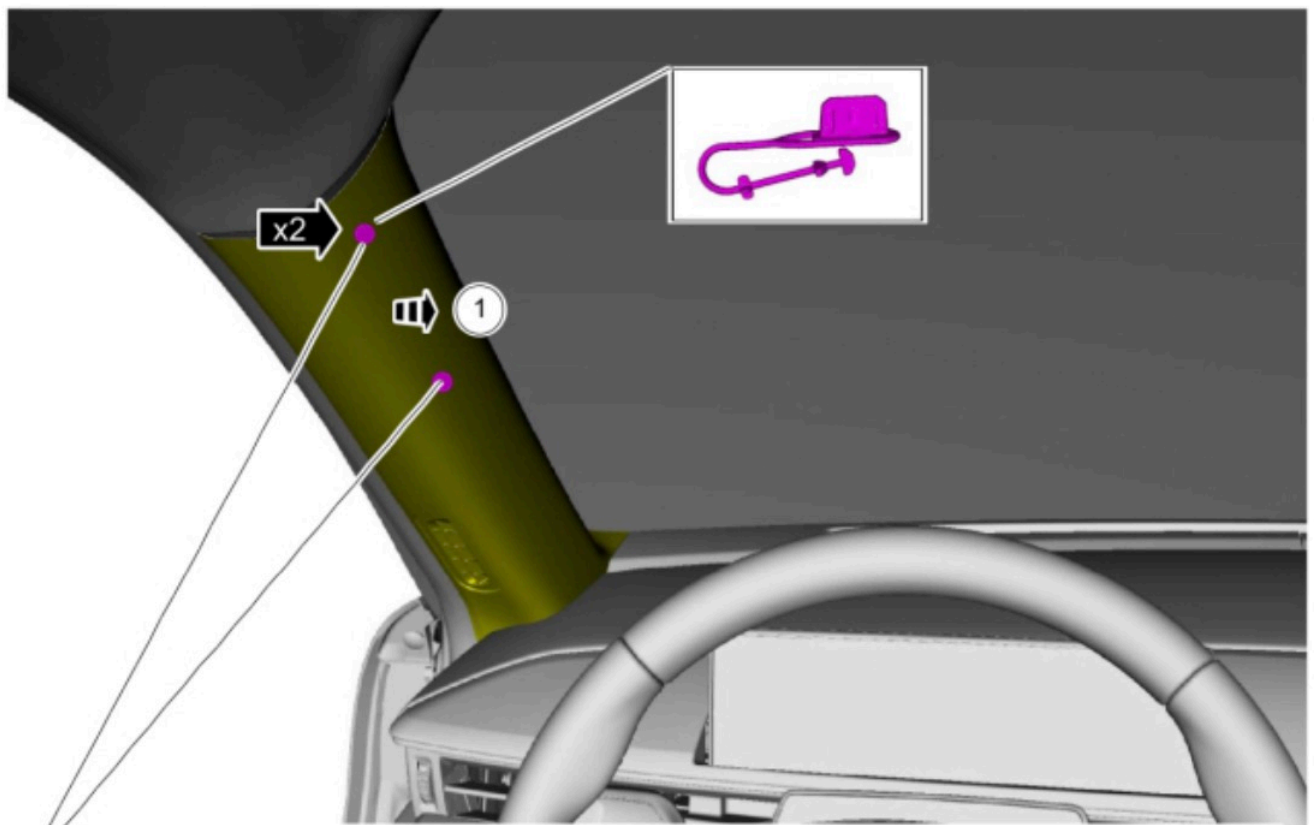



E341742

 2. Lift upward and backward and remove the A-pillar trim panel.




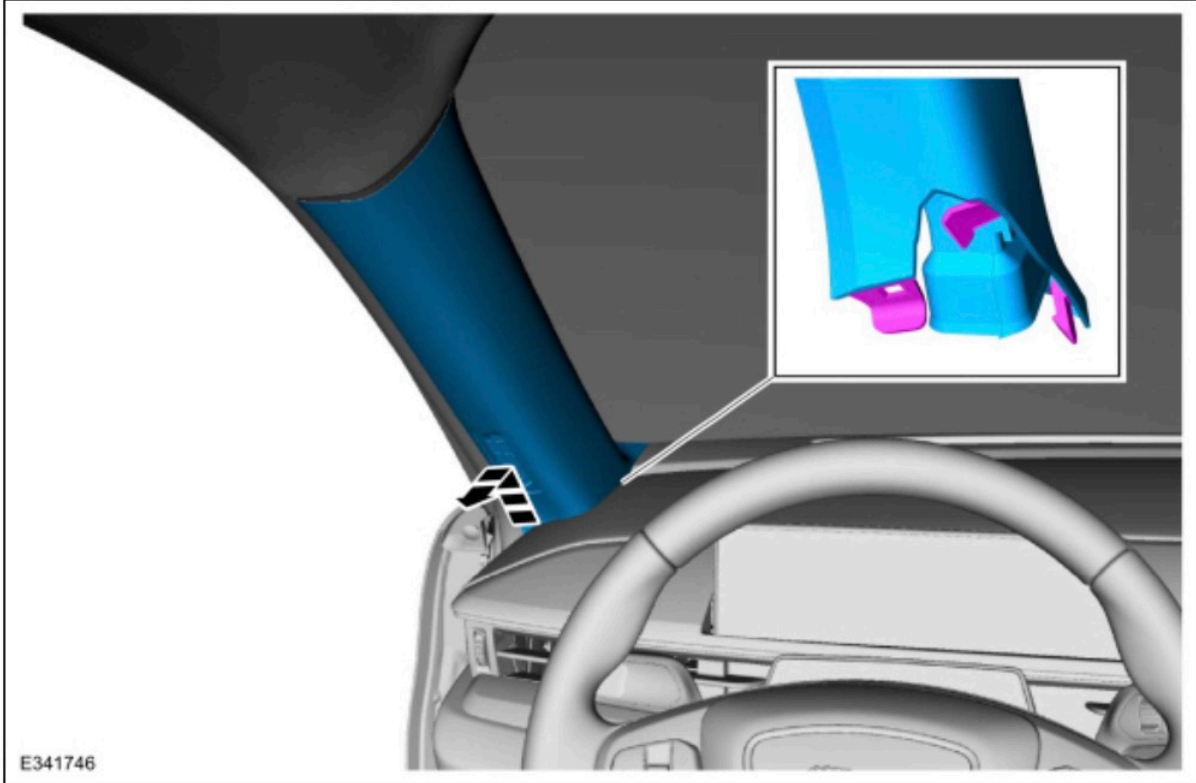


 3. Remove the A-pillar tether clips from the bracket.
 1. Release the A-pillar tether clip front tab.
Use the General Equipment: Interior Trim Remover
 2. Rotate the front of the A-pillar tether clip downward.
 3. Release the A-pillar tether clip rear tab.
Use the General Equipment: Interior Trim Remover
 4. Rotate the rear of the A-pillar tether clip downward.


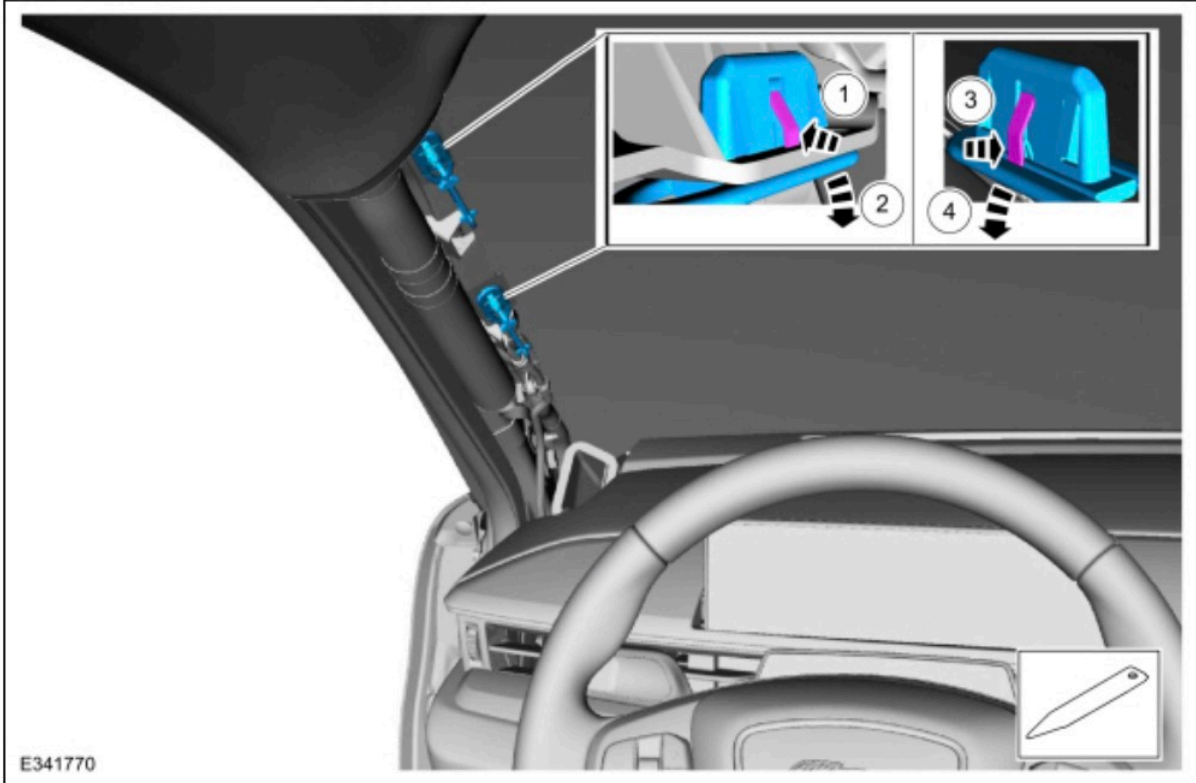


Installation

1. Install the A-pillar tether clips onto the A-pillar trim panel.
 1. Install the A-pillar trim panel clip from the tether clips.
 2. Rotate the tether clip lines to align the ends with openings.
 3. Slide the tether clip ends into the A-pillar trim panel.

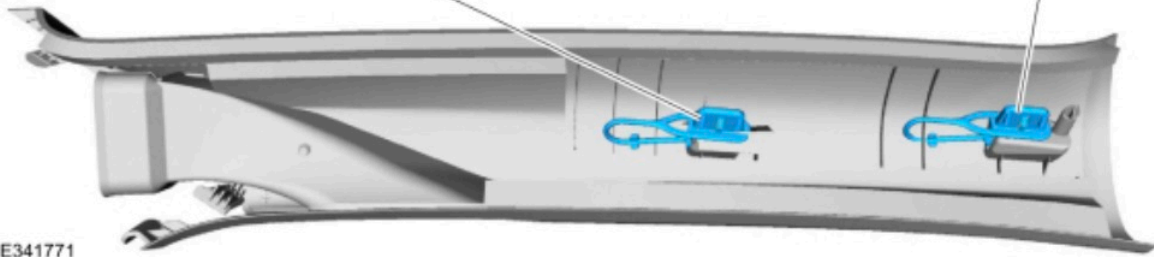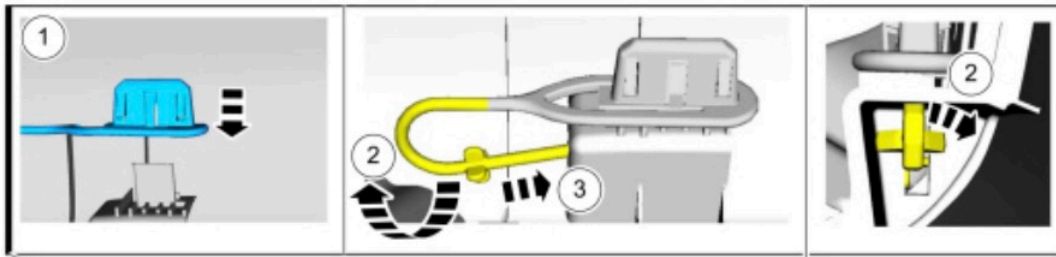

 2. Install the A-pillar trim panel.
 1. Install the A-pillar trim panel tabs into the instrument panel.
 2. Install the A-pillar trim panel tether clips into the A-pillar bracket.

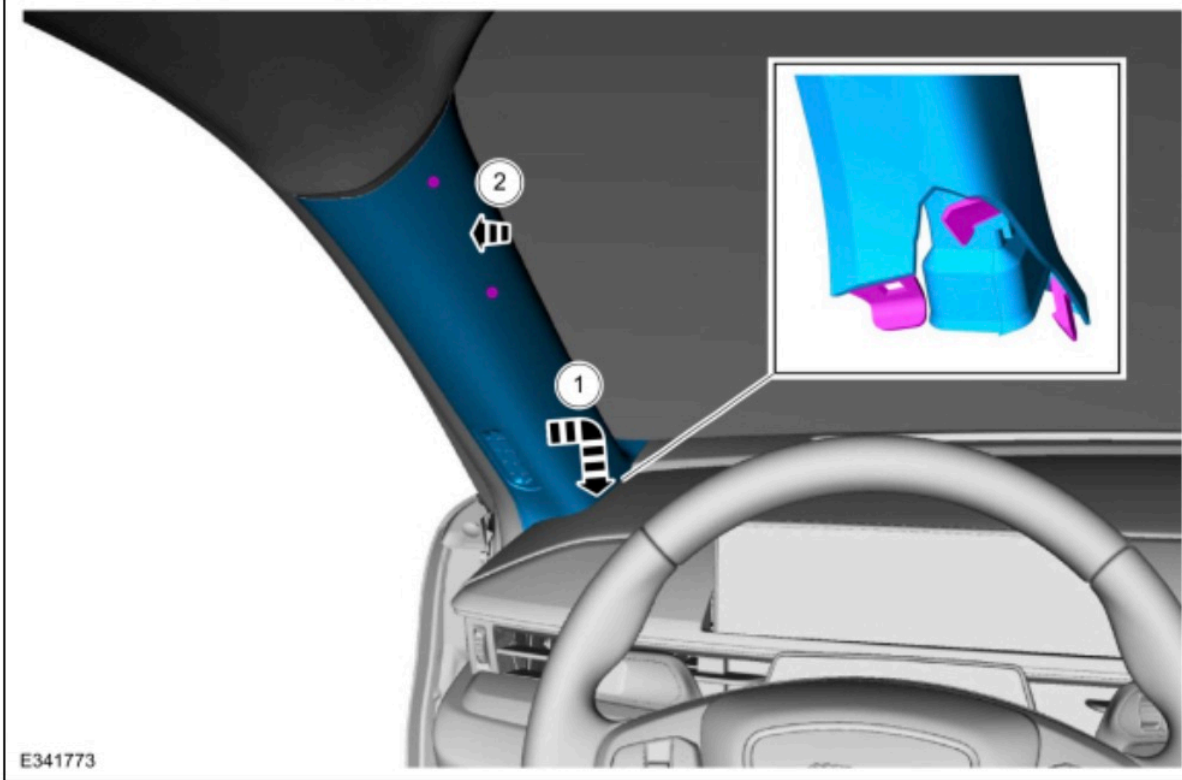

3. Inspect and position the front door weather strip lip so that it overlaps the top of the A-pillar trim panel.

