


Driver Door Window Control Switch



Removal

NOTE: Left hand drive (LHD) shown, right hand drive (RHD) similar.

1. Remove the front door trim panel.
Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation) .
2. Remove the driver door window control switch.
 1. Disconnect the electrical connector from the driver door window control switch.
 2. Remove the screws from driver door window control switch.
 3. Remove the driver door window control switch from the bezel assembly.

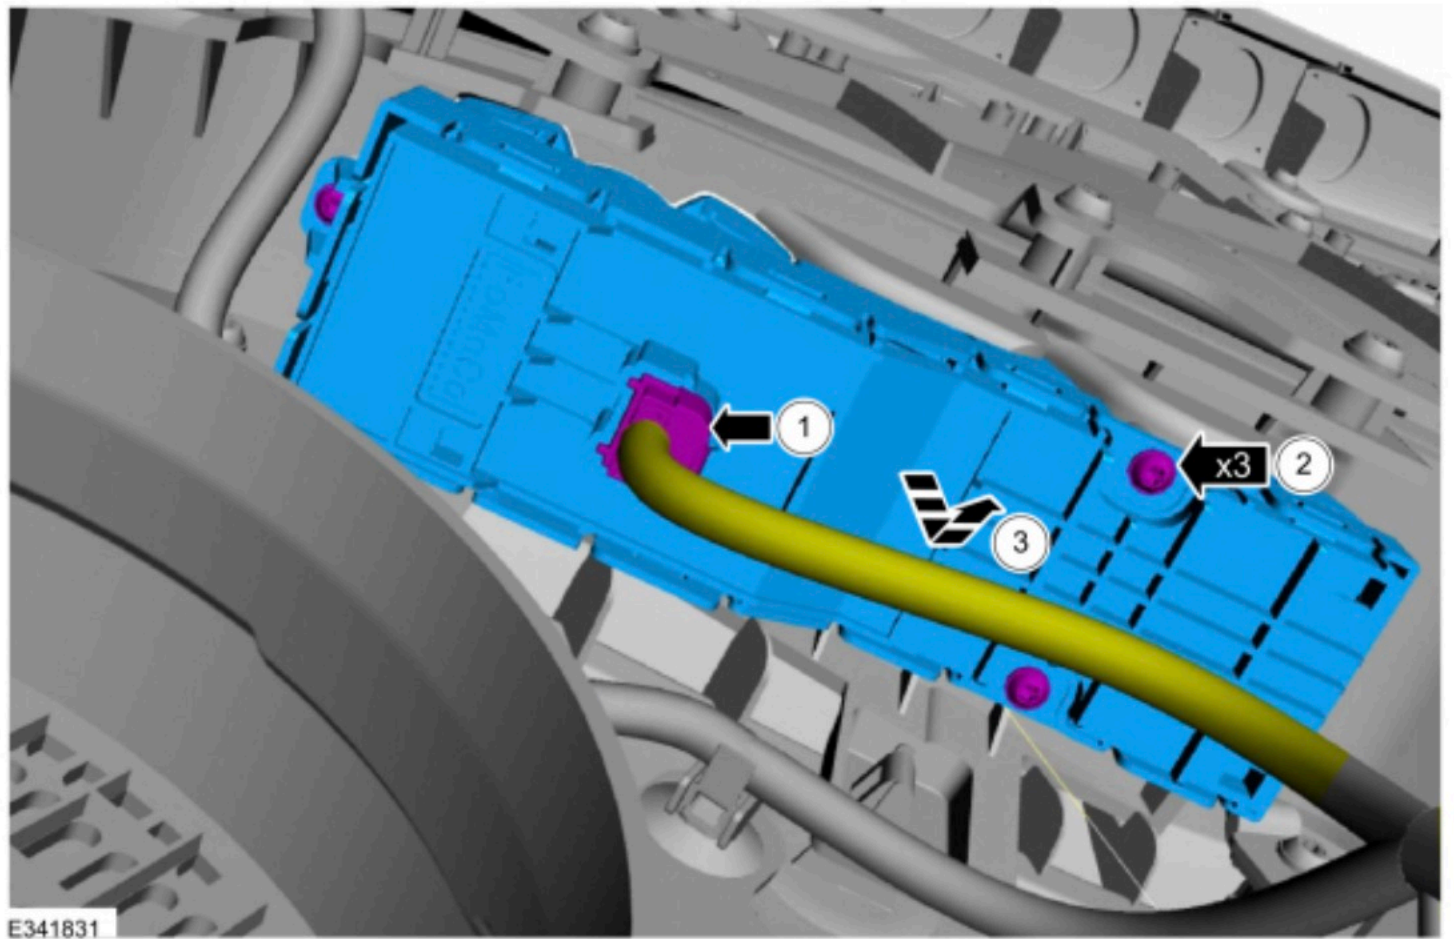

Installation

1. To install, reverse the removal procedure.