

Exit Warning


WHAT IS EXIT WARNING

Exit warning is designed to provide a visual and audible alert to notify the occupants about detected traffic approaching from the rear of the vehicle.

When approaching traffic is detected, the electronic door latches prevent the door adjacent to the hazard from opening. If the handle is pulled a second time the door will open.

HOW DOES EXIT WARNING WORK

Exit warning detects traffic objects such as vehicles, cyclists, scooters and motorcycles that approach your vehicle from the rear and cross into the exit warning zone. The exit warning zones are along the left and right sides of your vehicle and extend slightly past a fully open door. The exit warning system becomes active once you have started your vehicle and the vehicle is not moving. Exit warning operates in any gear position.

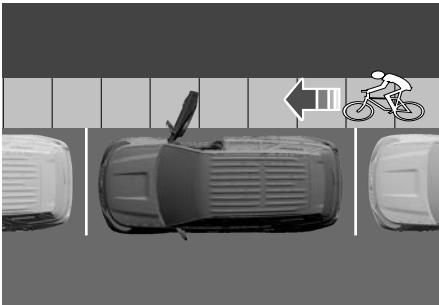

Note: *The system cannot detect animals, slow moving pedestrians or any type of stationary object.*

EXIT WARNING PRECAUTIONS



WARNING: The system is not a crash warning or avoidance system.



WARNING: You are responsible for controlling your vehicle at all times. The system is designed to be an aid and does not relieve you of your responsibility to drive with due care and attention. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: The exit warning system becomes active once you have started your vehicle and the vehicle is not moving. Exit warning is only active when your vehicle is on.



WARNING: Always pay attention to the traffic situation and the area around the vehicle.



WARNING: In cold and severe weather conditions the system may not function. Rain, snow and spray can all limit sensor performance.



WARNING: If damage occurs in the immediate area surrounding the sensor, have your vehicle checked as soon as possible.



WARNING: The system may not detect objects with surfaces that absorb reflection. Always drive with due care and attention. Failure to take care may result in a crash.

Exit Warning

EXIT WARNING LIMITATIONS

The exit warning system becomes active once you have started your vehicle and the vehicle is not moving. It remains on for about 3 minutes after turning your vehicle off. It turns off immediately when locking the doors. Exit warning will inform you when it turns off and operates in any gear position.

Note: Do not use this feature as a replacement for paying attention when exiting your vehicle.

Note: The system does not prevent contact with other vehicles by automatically closing the doors.

Note: The system may not inform and/or alert you if a traffic object is approaching too quickly or if the parking position prevents detection.

Exit Warning Alert

Note: Exit warning is designed to provide a visual and audible alert during an exit when an occupant opens any door and a traffic object is approaching on the same side.

Exit Warning Prevention (If Equipped)

Depending on your vehicle's features, exit warning is also designed to prevent the door latch from opening when a traffic object is approaching on the same side. In this situation, the inner door handle is disabled, and the door remains closed. A visual and audible warning is also present during a prevention. After the traffic object has passed and no additional traffic objects are approaching, the inner door handle is automatically enabled and the occupant can open the door to exit the vehicle.

Note: Occupants can override the prevention function and open the door while the traffic object is still approaching and the incident is still imminent by requesting the door to open twice quickly (within 5 seconds).

Exit Warning and Power Child Lock (If Equipped)

Power child lock remains active and must be manually deactivated if you attempt to switch it off at the same time exit warning detects an approaching traffic object.

A visual warning occurs in this situation.



Note: The driver can override the exit warning with power child lock function by pressing the power child lock deactivation button twice quickly (within 5 seconds).

Note: When the exit warning and power child lock function is activated, doors can still be opened from outside.

Exit Warning

EXIT WARNING INDICATORS



When exit warning detects an approaching traffic object on one side, the corresponding alert indicator in the exterior mirror is illuminated. If exit warning alert is active, the same alert indicator flashes. See **Blind Spot Information System Indicators** (page 252).


In addition to the mirror indicator there is also visual indicator in the touchscreen noting what side a traffic object has been detected on.

SWITCHING EXIT WARNING ON AND OFF

You can switch off the exit warning system by using the touchscreen.

Note: *The system remembers the last setting when you start your vehicle.*

LOCATING THE EXIT WARNING SENSORS

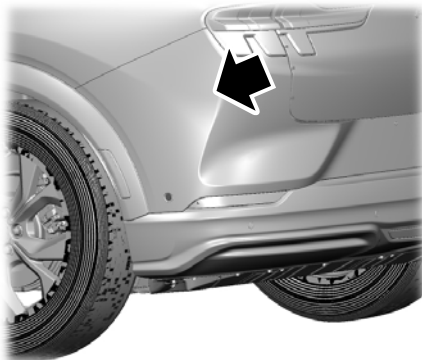

The sensors are behind the rear bumper on both sides of your vehicle.

Note: *Keep the sensors free from snow, ice and large accumulations of dirt.*

Note: *Do not cover the sensors with bumper stickers, repair compound or other objects.*

Note: *Blocked sensors may affect system accuracy.*

Note: *The system may not correctly operate when towing a trailer or bike rack.*

Exit Warning

EXIT WARNING – TROUBLESHOOTING

EXIT WARNING – INFORMATION MESSAGES

Message	Details
Right side: Check surroundings before exiting	Right exit warning alert is active.
Left side: Check surroundings before exiting	Left exit warning alert is active.
Exit Warning turning off Exit safely	Displays when the exit warning system turns off or shuts down.
Exit Warning System fault	Displays when the exit warning system detects any system error.