


Hood Latch Release Cable Actuator

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the underhood storage compartment.
Refer to: [Underhood Storage Compartment](#) (501-02 Front End Body Panels, Removal and Installation).
2. Remove the hood latch release cable actuator.
 1. Disconnect the hood latch release cable actuator electrical connector.
 2. Detach the rear hood latch release cable from the mounting bracket and disconnect the rear hood latch release cable end.
 3. Detach the front hood latch release cable from the mounting bracket and disconnect the rear hood latch release cable end.
 4. Remove the bolts and the hood latch release cable actuator.
Torque: 55 lb.in (6.2 Nm)

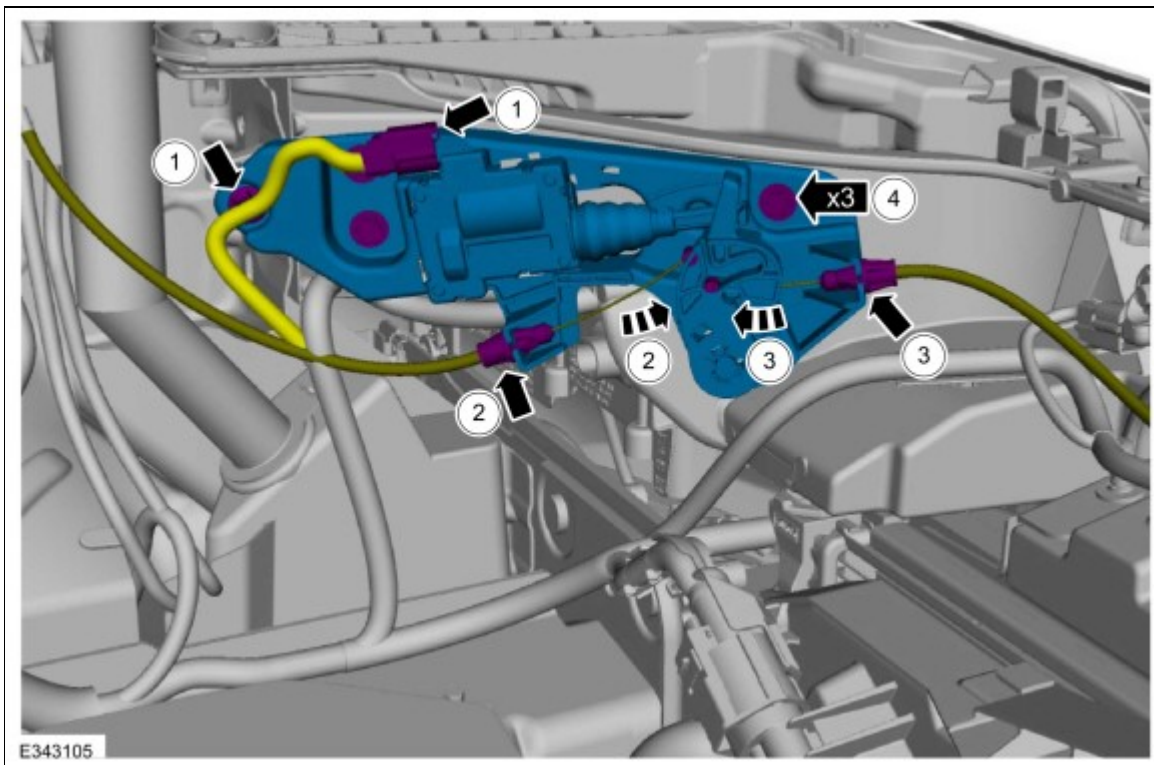

Installation

1. To install, reverse the removal procedure.

