


Front Trunk Release Relay Module

Removal

1. Remove the Glove Compartment.
Refer to: [Glove Compartment](#) (501-12 Instrument Panel and Console, Removal and Installation).
2. Remove the front trunk release relay module.
 1. Disconnect the front trunk release relay module electrical connector.
 2. Release the front trunk release relay module retainer.
 3. Remove the front trunk release relay module.

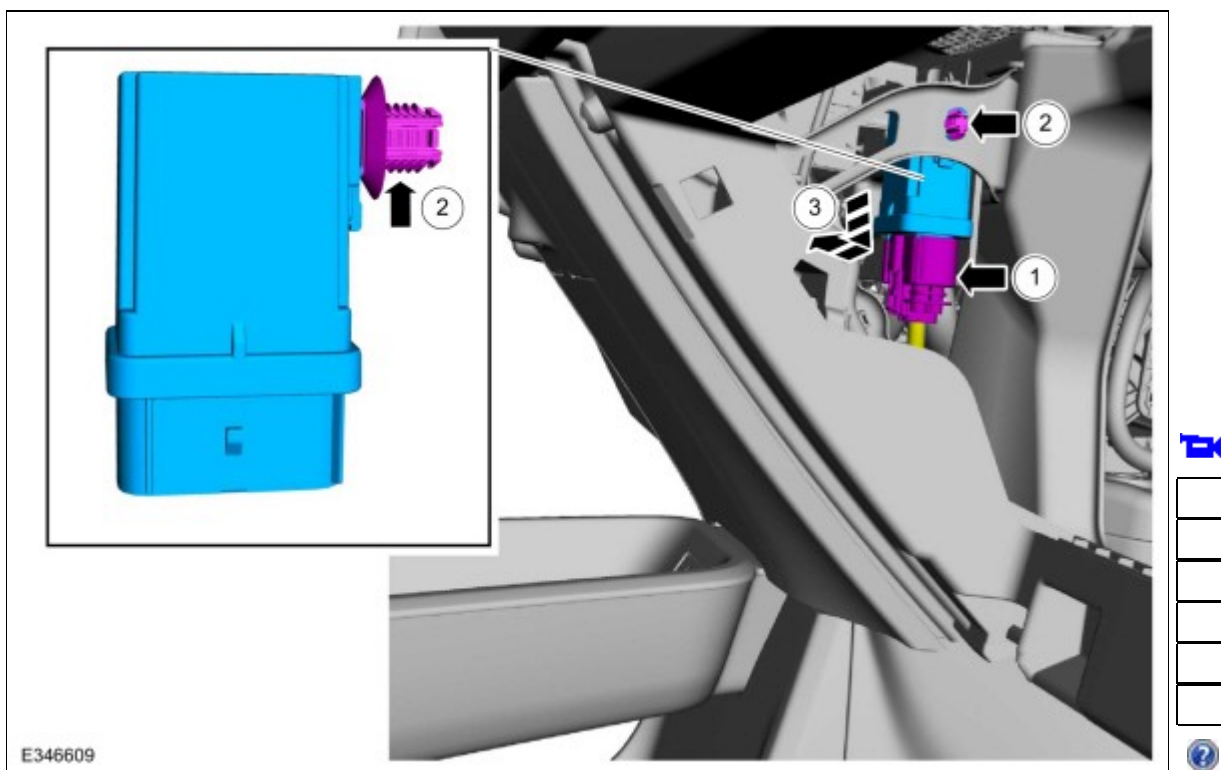

Installation

1. To install, reverse the removal procedure.

