



BATTERY JUNCTION BOX (BJB)

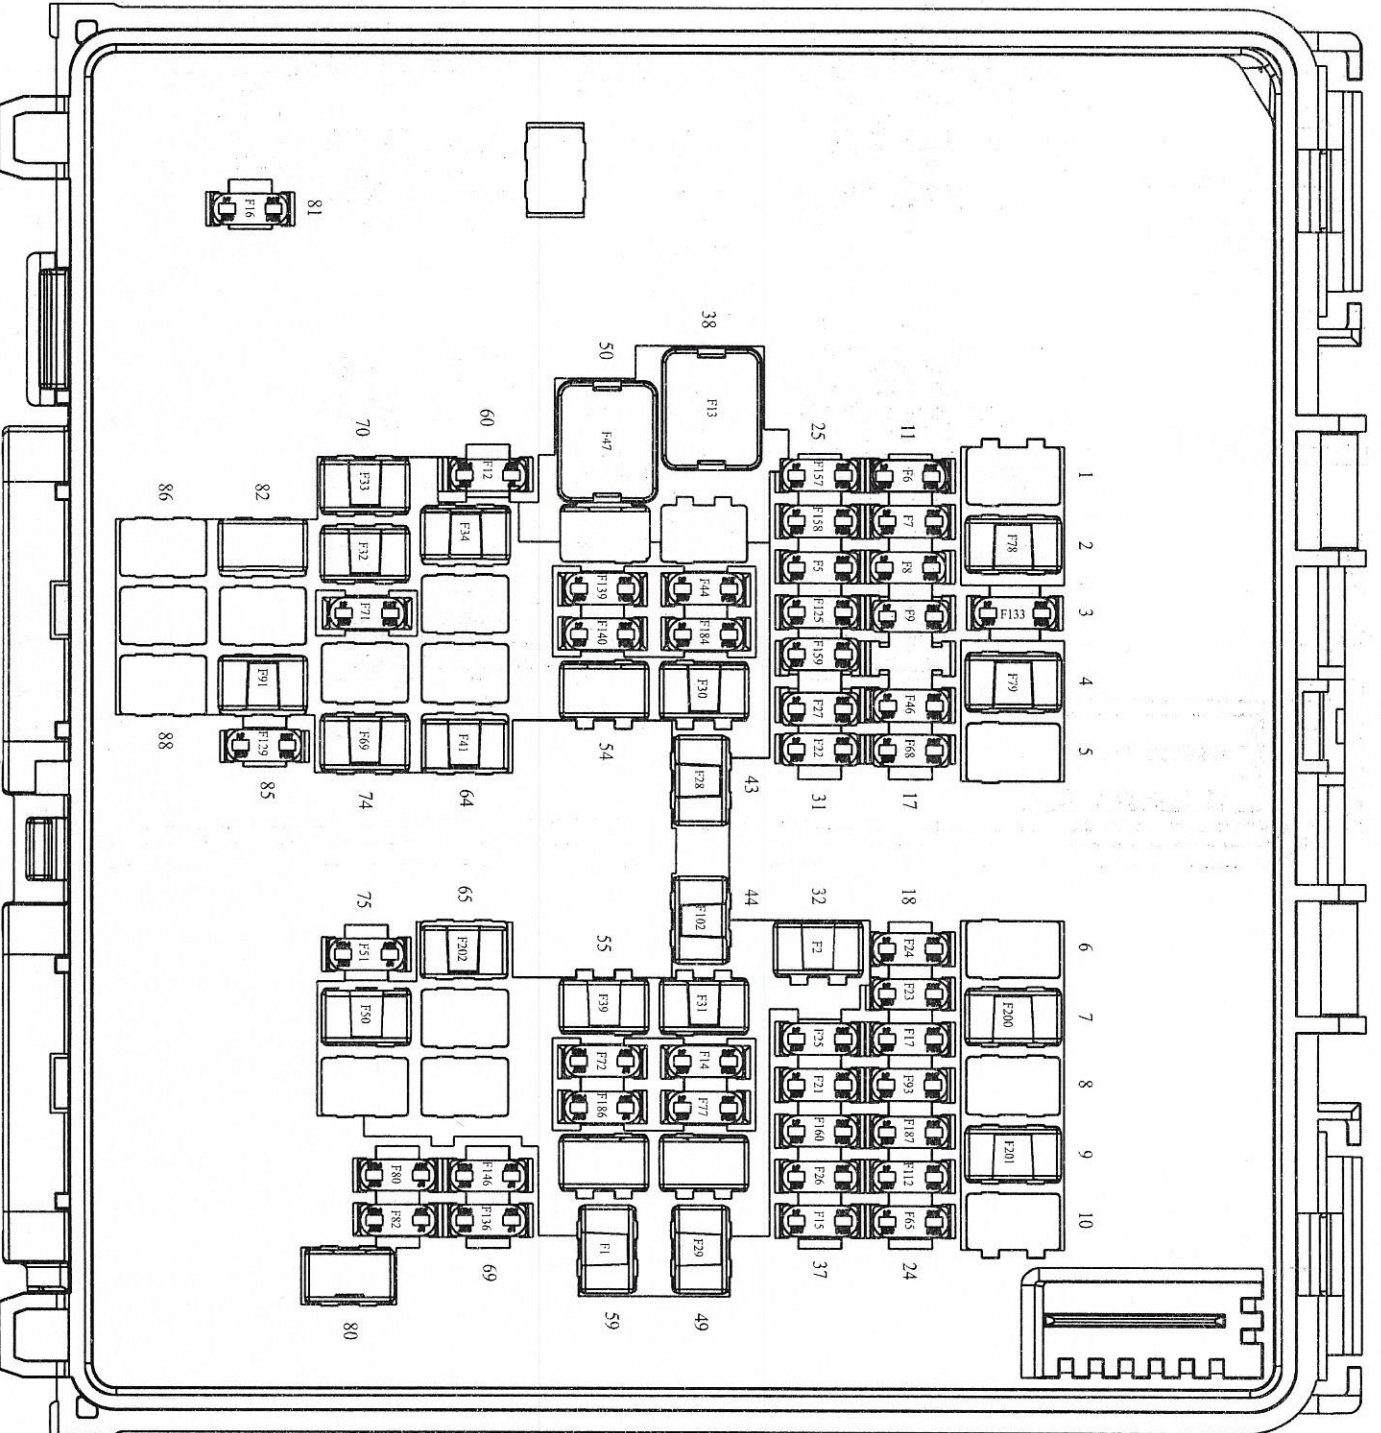

BATTERY JUNCTION BOX (BJB)

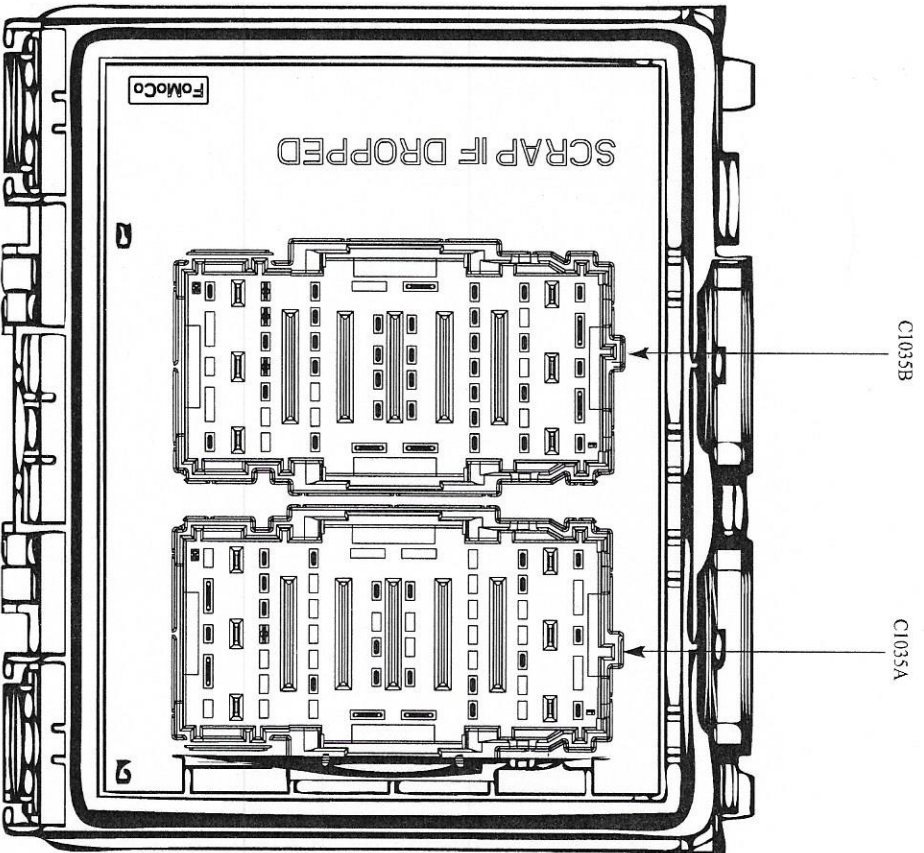

BATTERY JUNCTION BOX (BJB)

Fuse	Position	Amps	Circuits protected
F1	59	40	Body Control Module (BCM)
F2	32	30	Body Control Module (BCM)
F4	-	-	Not used
F5	27	5	Secondary On-board Diagnostic Control Module C (SOBDMC)
F6	11	15	Powertrain Control Module (PCM)
F7	-	-	Not used
F8	13	15	Active Grille Shutter Air Conditioning Control Module (ACCM) Cabin Heater Coolant Diverter Valve Cabin Heater Coolant Pump
F9	14	15	Transmission
F11	-	-	Not used
F12	-	-	Not used
F13	38	40	Blower motor control module
F14	46	20	Not used
F15	37	20	Horn LH, Horn RH
F16	81	10	Rear washer relay
F17	20	5	Charge Status Indicator (CSI)
F21	34	10	Headlamp assemblies, Headlamp Control Module (HCM)
F22	31	5	Power Steering Control Module (PSCM)
F23	19	10	Anti-lock Brake System (ABS) module
F24	18	10	Powertrain Control Module (PCM)
F25	33	20	Image Processing Module A (IPMA)
F26	36	15	Secondary On-board Diagnostic Control Module B (SOBDMB) Secondary On-board Diagnostic Control Module C (SOBDMC) Battery Junction Box [BGM]C]
F27	-	-	Not used
F28	43	40	Anti-lock Brake System (ABS) module
F29	49	60	Anti-lock Brake System (ABS) module
F30	42	30	Driver Seat Module (DSM) Front Seat Control Switch LH
F31	45	30	Driver Seat Module (DSM) Front Seat Control Switch RH


BATTERY JUNCTION BOX (BJB)

Fuse	Position	Amps	Circuits protected
F32	71	20	Circuits protected Center Console Power Point
F33	-	-	Not used
F36	-	-	Not used
F37	-	-	Not used
F38	-	-	Not used
F39	55	30	HVAC control module
F41	64	30	Rear Gate Trunk Module (RGTM)
F44	-	-	Not used
F46	21	16	Secondary On-board Diagnostic Control Module A (SOBDMA)
F47	50	60	Cooling fan motor
F48	-	-	Not used
F50	76	30	Rear Window Defrost Grid
F51	-	-	Not used
F54	-	-	Not used
F60	-	-	Not used
F61	-	-	Not used
F62	-	-	Not used
F68	17	20	Steering Column Lock Module
F69	74	30	Windshield wiper motor
F71	72	20	Rear window wiper motor
F75	-	-	Not used
F78	2	40	Heated windshield element LH
F79	4	40	Heated windshield element RH
F91	84	40	Blunt Cut - Trailer Tow
F93	21	5	Auxiliary Relay Box

BATTERY JUNCTION BOX (BJB)

Fuse	Position	Amps	Circuits protected
F102	44	60	Battery Junction Box [BJMC]
F120	-	-	Not used
F123	-	-	Not used
F124	85	5	Rain sensor module
F125	-	-	Not used
F133	3	15	Heated windshield element LH
F136	69	20	Rear door latch control module RH [DCMH]
F137	-	-	Not used
F139	52	5	Center console USB charge port
F140	-	-	Not used
F146	68	5	Battery energy control module (BECM)
F157	25	25	Headlamp assembly LH
F158	26	25	Headlamp assembly RH
F159	29	5	Direct current/direct current (DC/DC) converter control module
F160	35	15	Steering Column Control Module (SCCM)
F186	57	10	Remote data link connector (DLC)

BODY CONTROL MODULE (BCM)

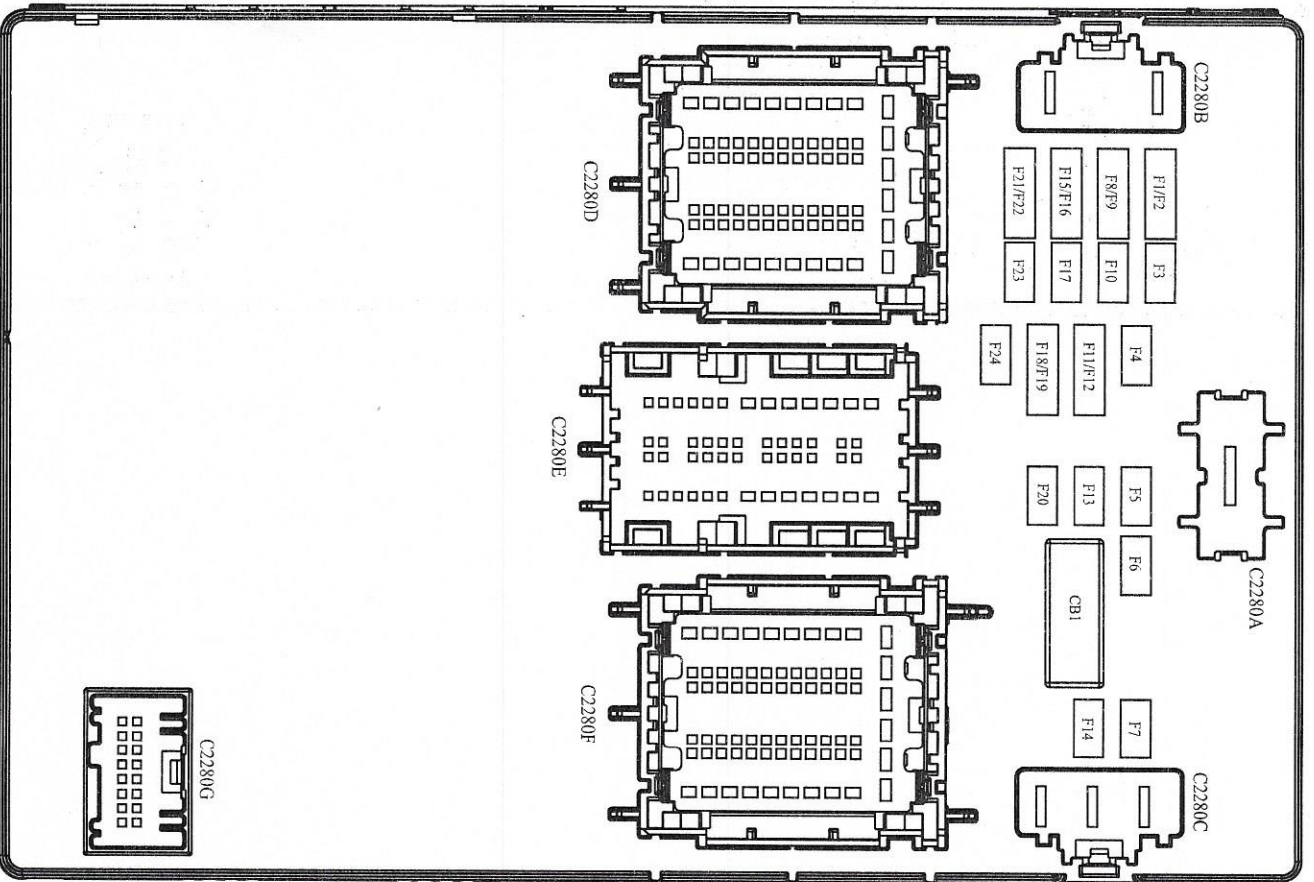

BODY CONTROL MODULE (BCM)

Fuse	Amps	Circuits protected
CBI	-	Not used
F1	5	Restraints Control Module (RCM)
F2	5	Heated rear seat module
F3	10	Extended Power Module - LHD
F4	10	Display Unit
F5	-	Not used
F6	-	Not used
F7	30	Passenger Door Module (PDM)
F8	-	Not used
F9	5	Auto-dimming interior mirror Overhead console
F10	10	Extended Power Module - RHD
F11	5	Hands free lifeline actuation module Rear Gate Trunk Module (RGTM) Telenatics Control Unit (TCU) module
F12	5	Front exterior door latch switch LH Front exterior door latch switch RH Intrusion/inclination sensor Keyless entry keypad LH Keyless entry keypad RH Rear interior door latch switch LH
F13	-	Not used
F14	30	Driver Door Module (DDM)
F15	-	Not used
F16	15	Vehicle Dynamics Module (VDM)
F17	15	Sync module [APIM]
F18	7.5	Driver status monitor camera module (CMR)
F19	7.5	Headlamp switch
F20	10	Security horn relay
F21	7.5	Gateway module A (GWM) Gear Shift Module (GSM) HVAC control module
F22	7.5	Instrument Panel Cluster (IPC) module Steering Column Control Module (SCCM)
F23	20	Audio Front Control Module (ACM)
F24	20	Head Up Display (HUD) module