



Rear Suspension - Wheel Bearing and Wheel Hub

Mustang Mach-E 2021 (06/2019-)


[Print](#) [Report An Error](#)**Removal and Installation****Special Tool(s)**

 E153858	205-D070 Remover, Front Wheel Hub
--	--------------------------------------


Removal

 **NOTICE:** Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
- 2.

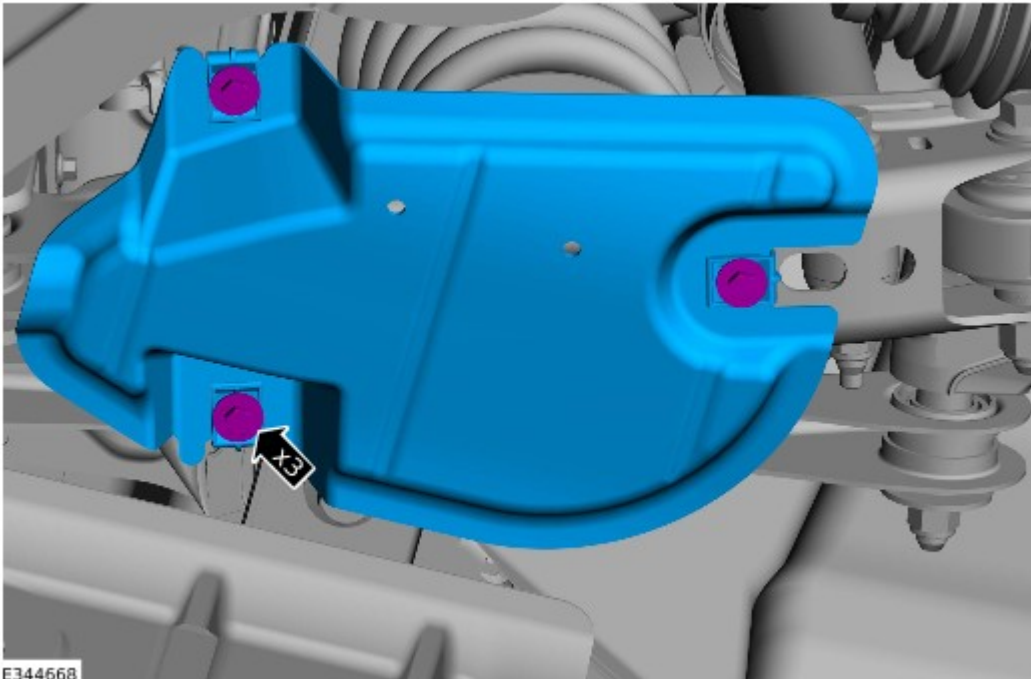


3. **NOTE:** This step require the aid of another technician.

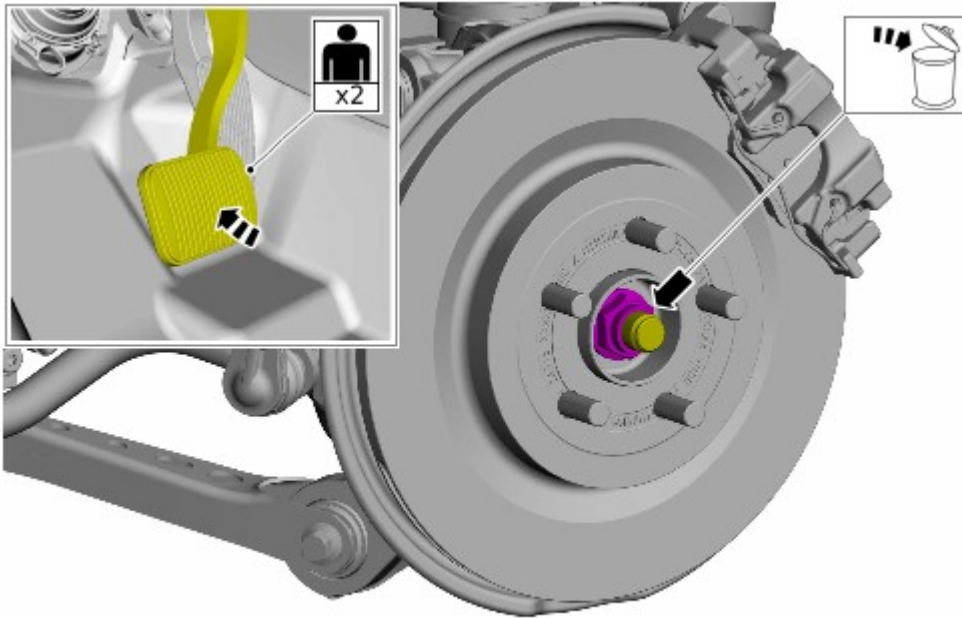

E344719

4. Use Special Service Tool: [205-D070](#).

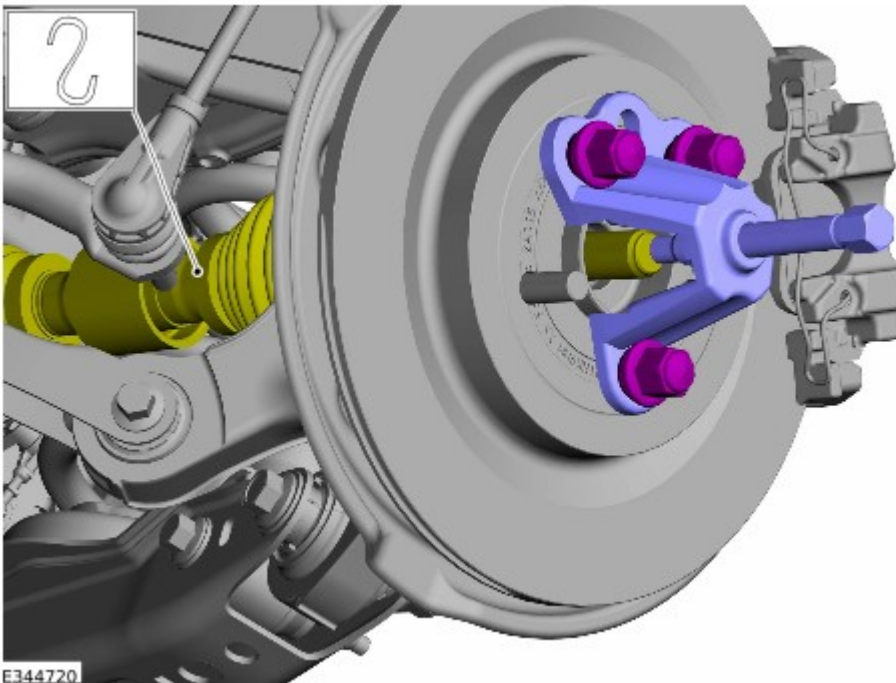


E344720


5. Refer to: [Brake Disc](#) (206-04 Rear Disc Brake, Removal and Installation).
6. NOTE: Make sure that the sensor housing area is clean and free of foreign material before the sensor is removed.
NOTE: This step is only necessary when installing a new component.

- 1.

2.

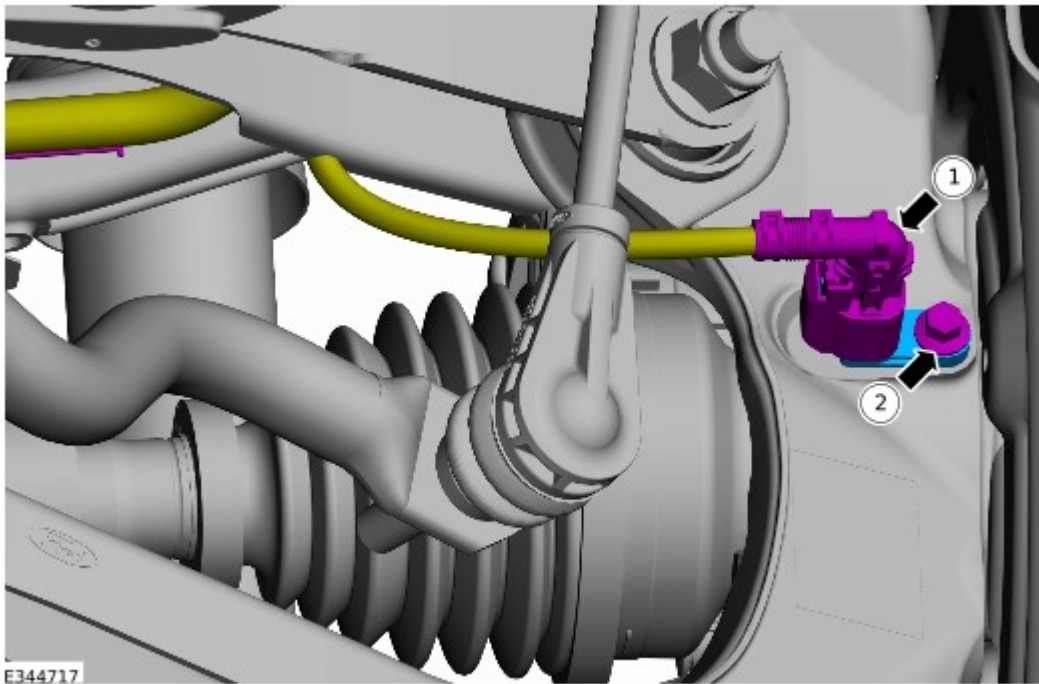

7.

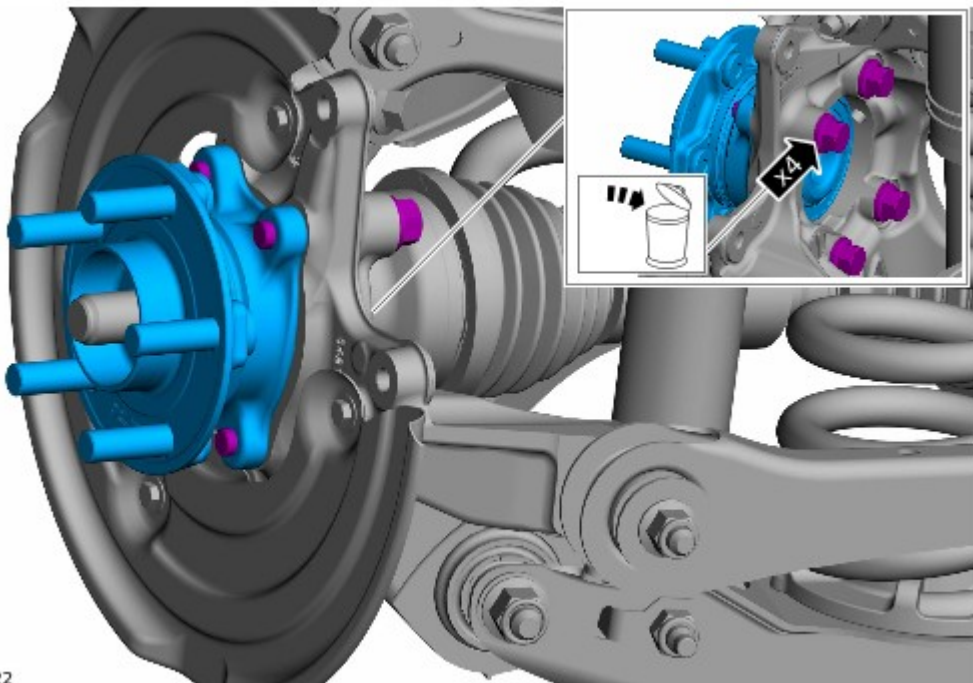


Installation

1. NOTE: Tighten the bolts in a cross pattern.

Torque:

Stage 1: 40 Nm

Stage 2: 60°

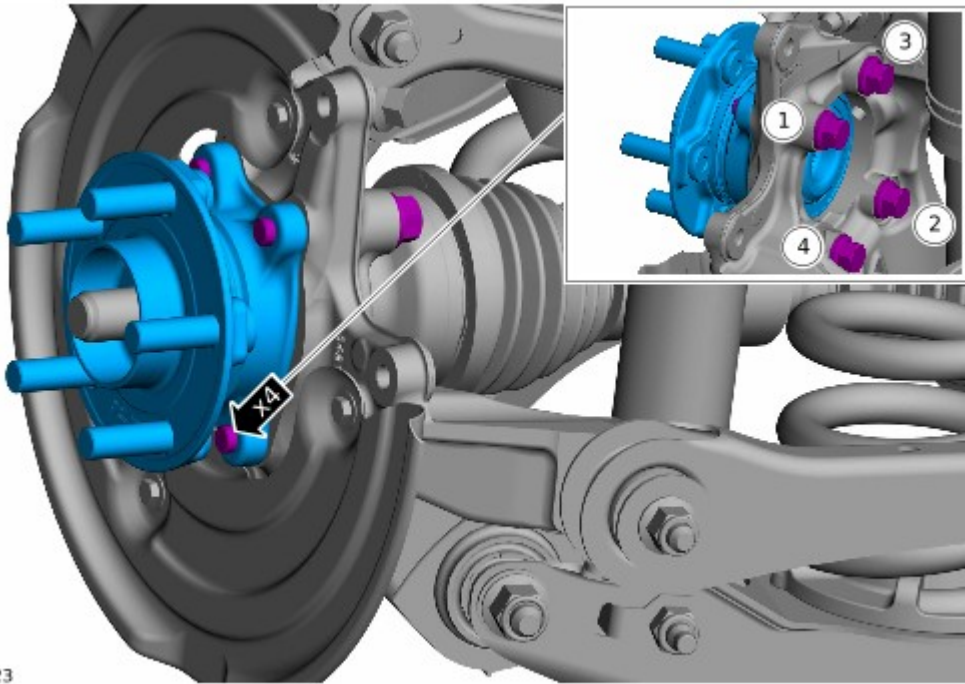


E344723

2.

1. 1. NOTICE: Before installing a wheel speed sensor, inspect the sensor housing to make sure the sensor cavity is clean and free of foreign material or damage to the sensor may occur.
NOTE: This step is only necessary when installing a new component.


Torque: 8 Nm

2.

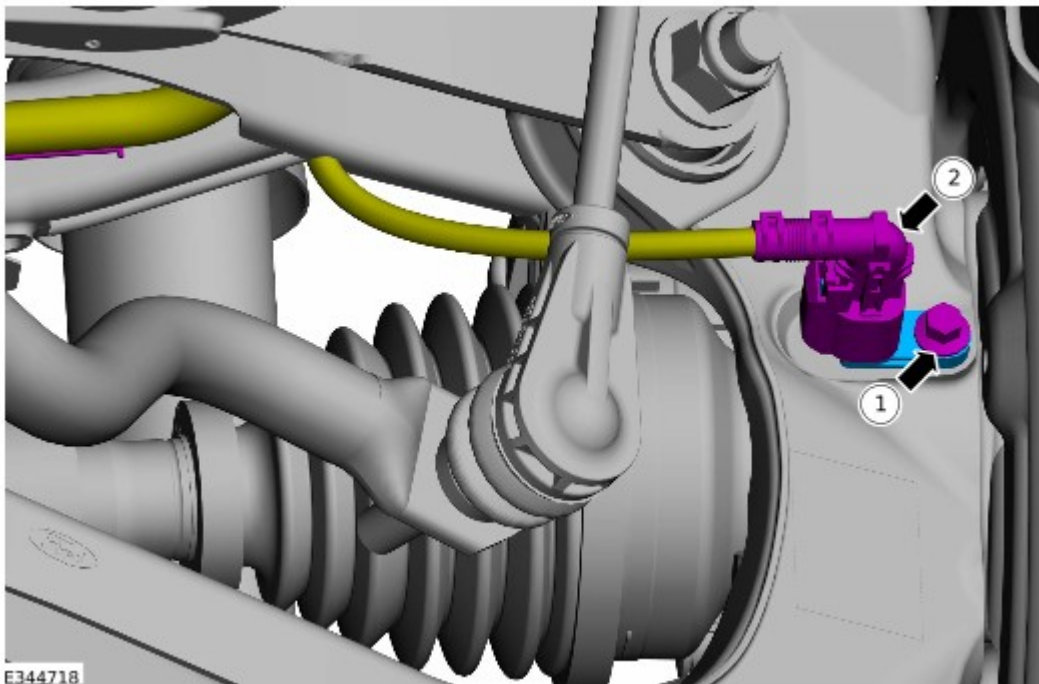


3. Refer to: [Brake Disc](#) (206-04 Rear Disc Brake, Removal and Installation).
4. **NOTE:** This step require the aid of another technician.
NOTE: Make sure that a new component is installed.

Torque: 200 Nm

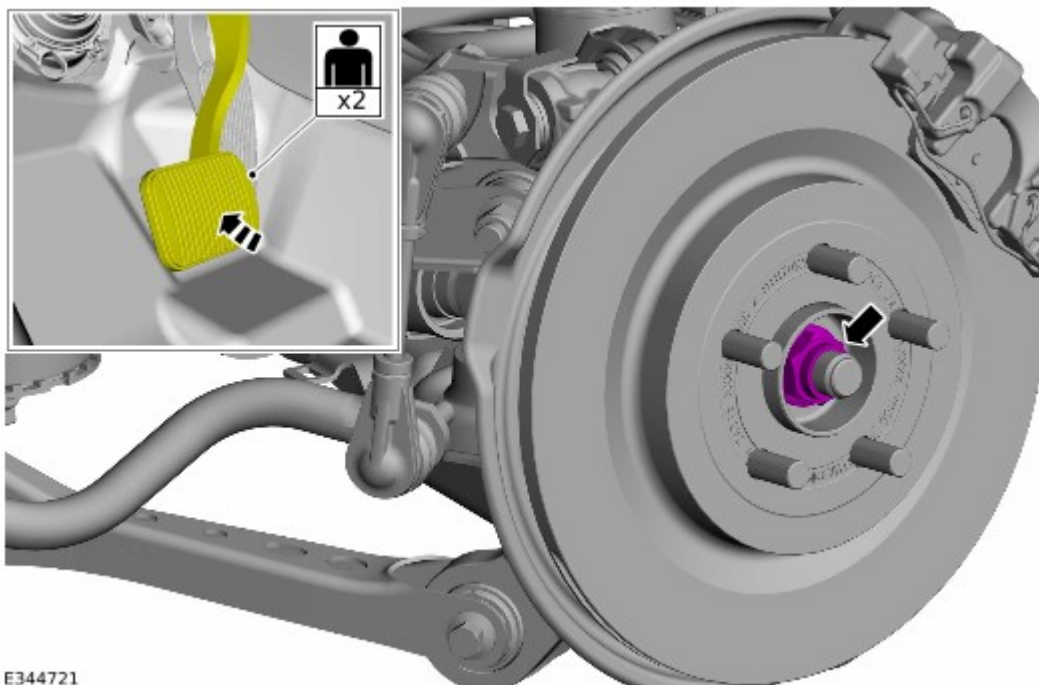

5. *Torque:* 2 Nm

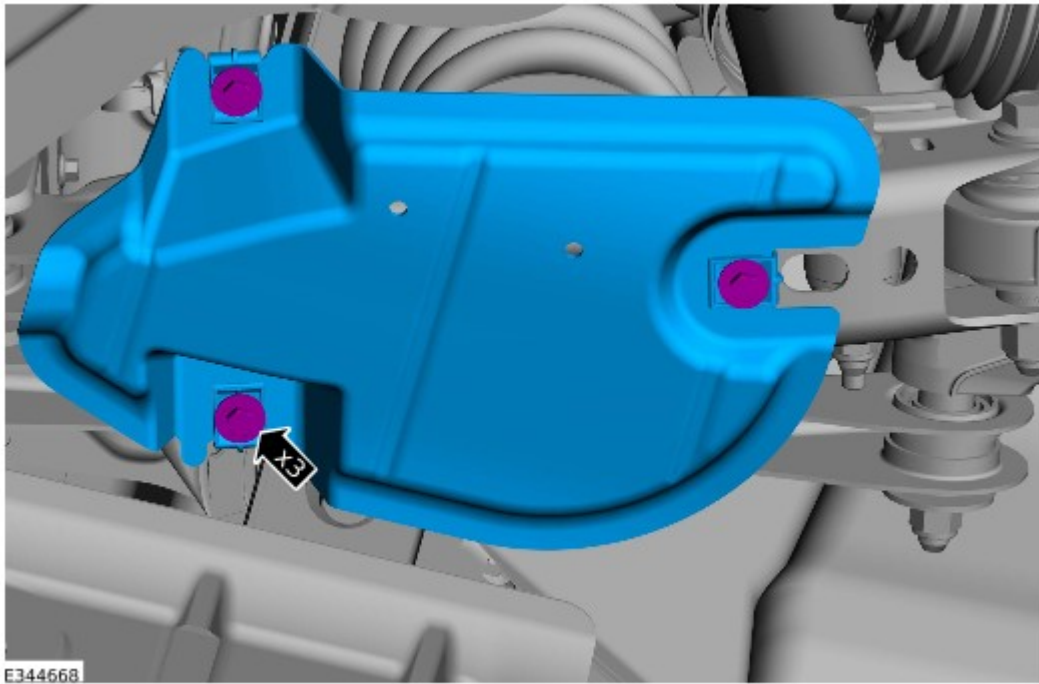

6. Install the wheel and tire.

Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).