

Liftgate Trim Panel



Special Tool(s) / General Equipment

Interior Trim Remover


Removal

1. Release the clips and remove center upper liftgate trim panel.
Use the General Equipment: Interior Trim Remover



E341424


2. On LH side.
Release the clips and remove the LH upper liftgate trim panel.
Use the General Equipment: Interior Trim Remover

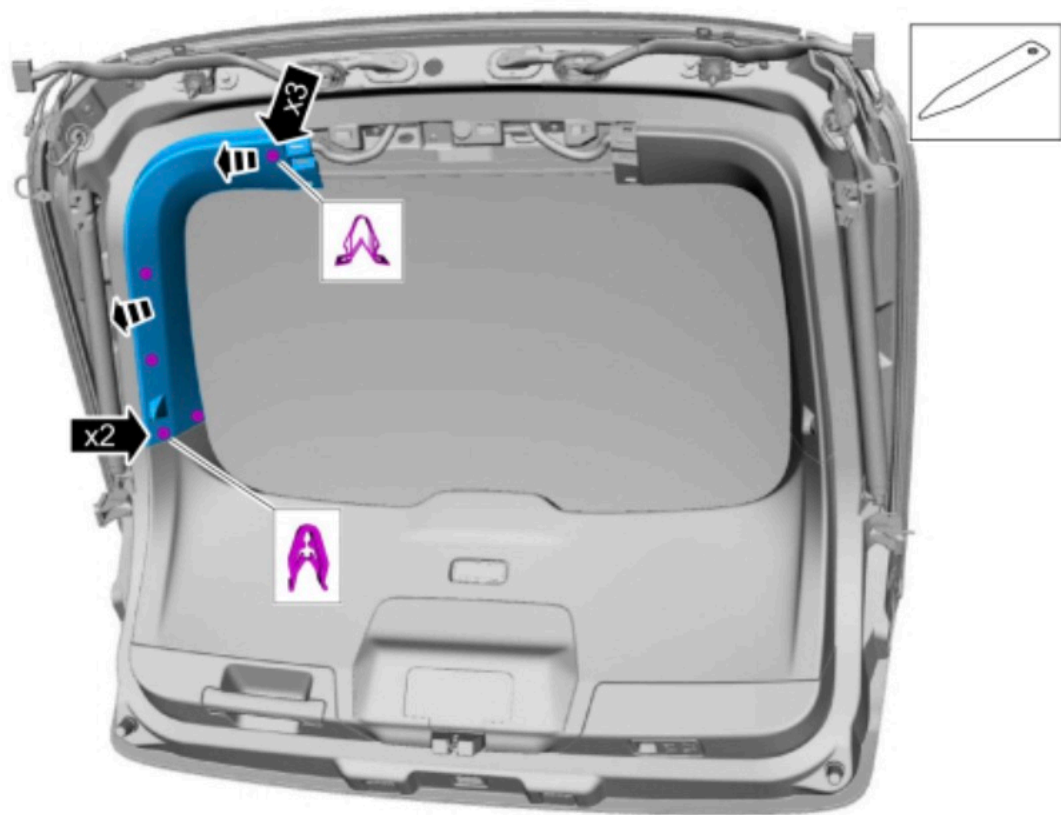


E341431

3. On RH side.

Release the clips and remove the RH upper liftgate trim panel.
Use the General Equipment: Interior Trim Remover

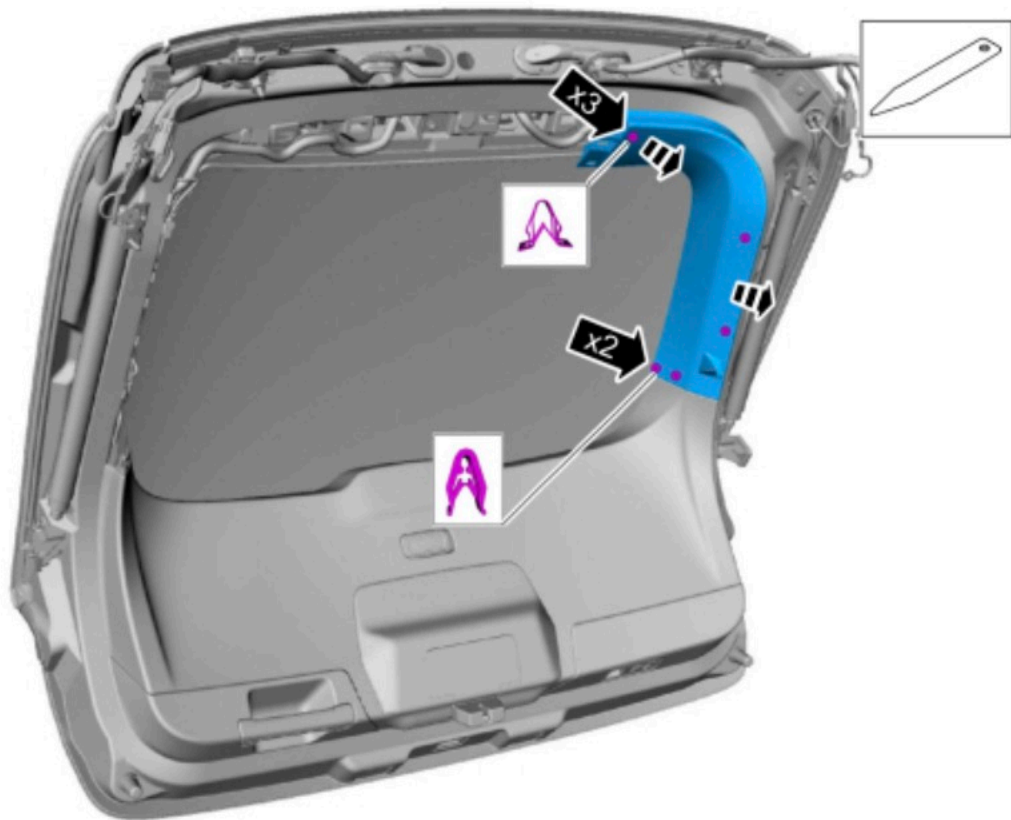

- 4.
- Remove the lower liftgate trim panel.
1. Release the lower liftgate trim panel clips.
Use the General Equipment: Interior Trim Remover
 2. Disconnect the lower liftgate trim panel interior lamp electrical connector.

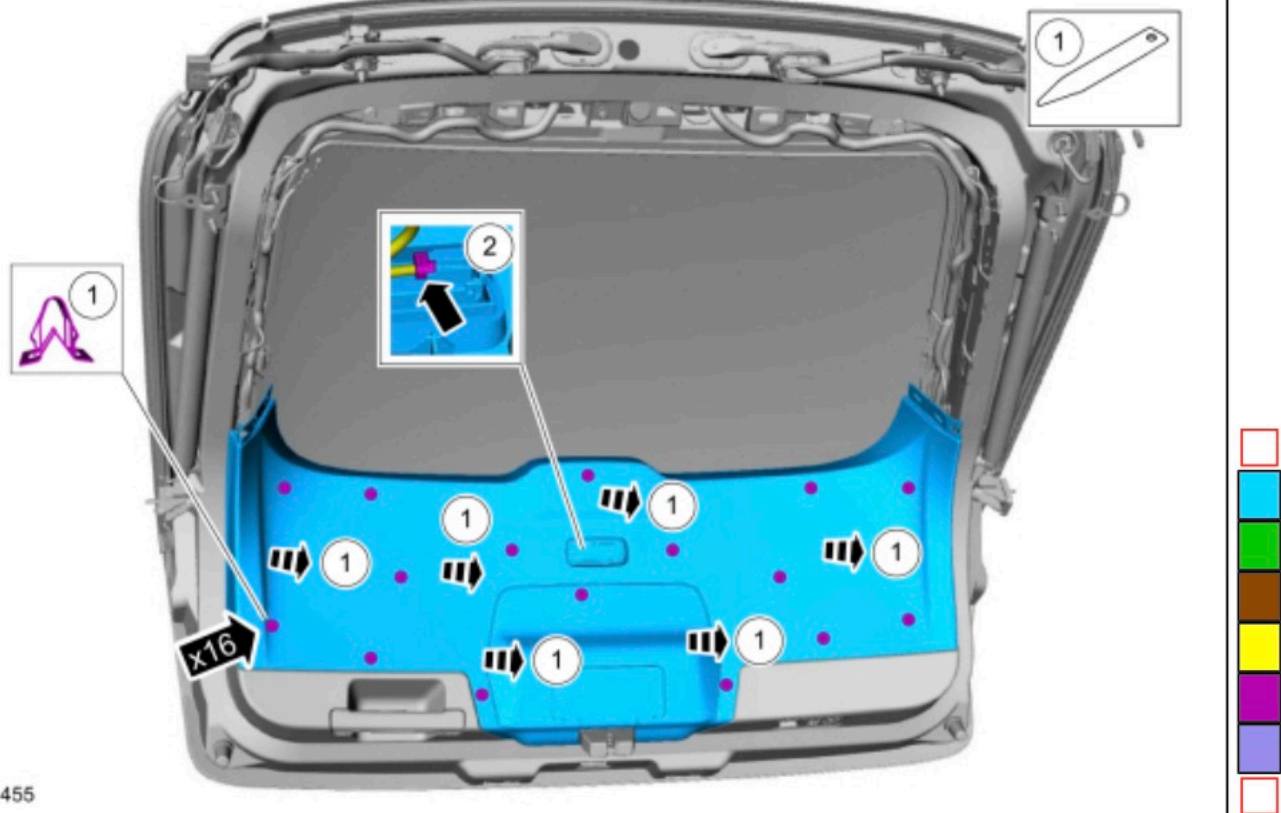

Installation

1. To install, reverse the removal procedure.