

Accessory Protocol Interface Module (APIM)



Special Tool(s) / General Equipment

Interior Trim Remover

Removal


NOTE: Left hand drive (LHD) shown, right hand drive (RHD) similar.

NOTE: Removal steps in this procedure may contain installation details.


- NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.

Using a diagnostic scan tool, begin the PMI process for the APIM following the on-screen instructions.


- Release the clips, position and remove the lower center instrument panel trim panel.
Use the General Equipment: Interior Trim Remover

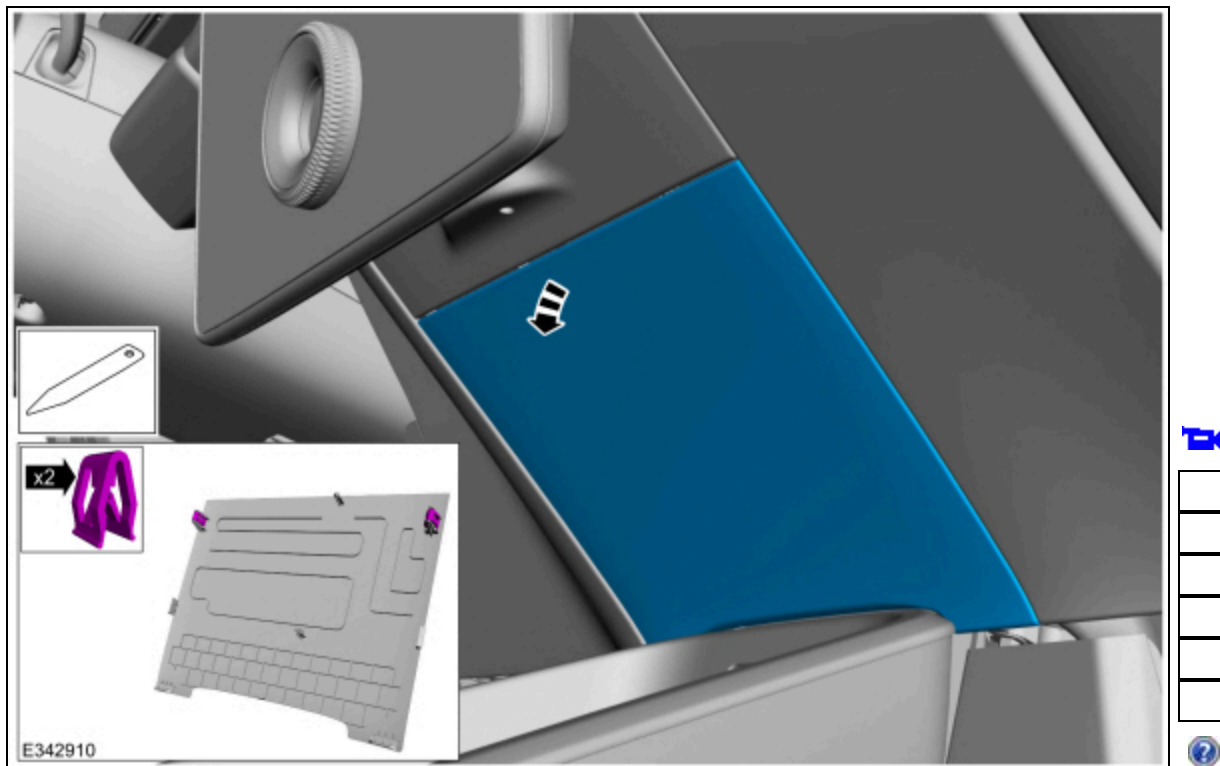



- Remove the information and entertainment display unit.
Refer to: [Center Display Screen](#) (415-00 Information and Entertainment System - General Information, Removal and Installation).
- Release the clips and the LH instrument panel upper finish panel.
Use the General Equipment: Interior Trim Remover

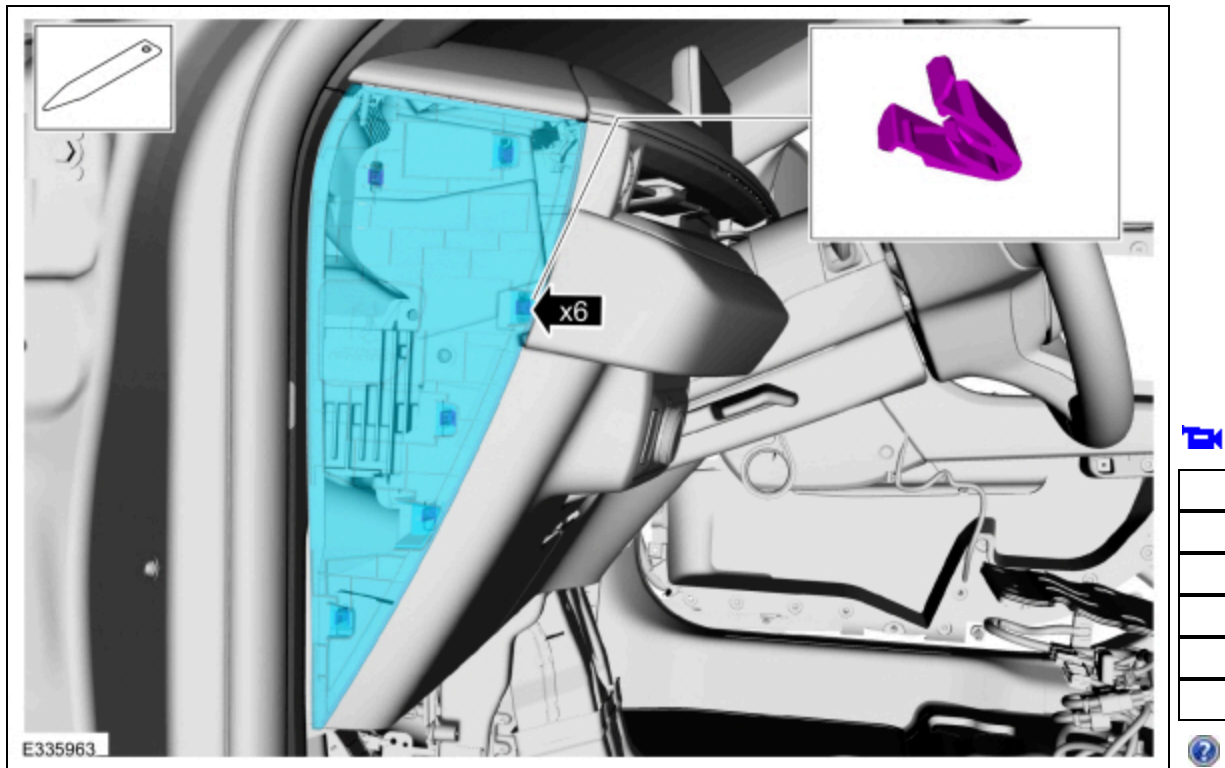

5. Remove the screw.
Torque: 22 lb.in (2.5 Nm)

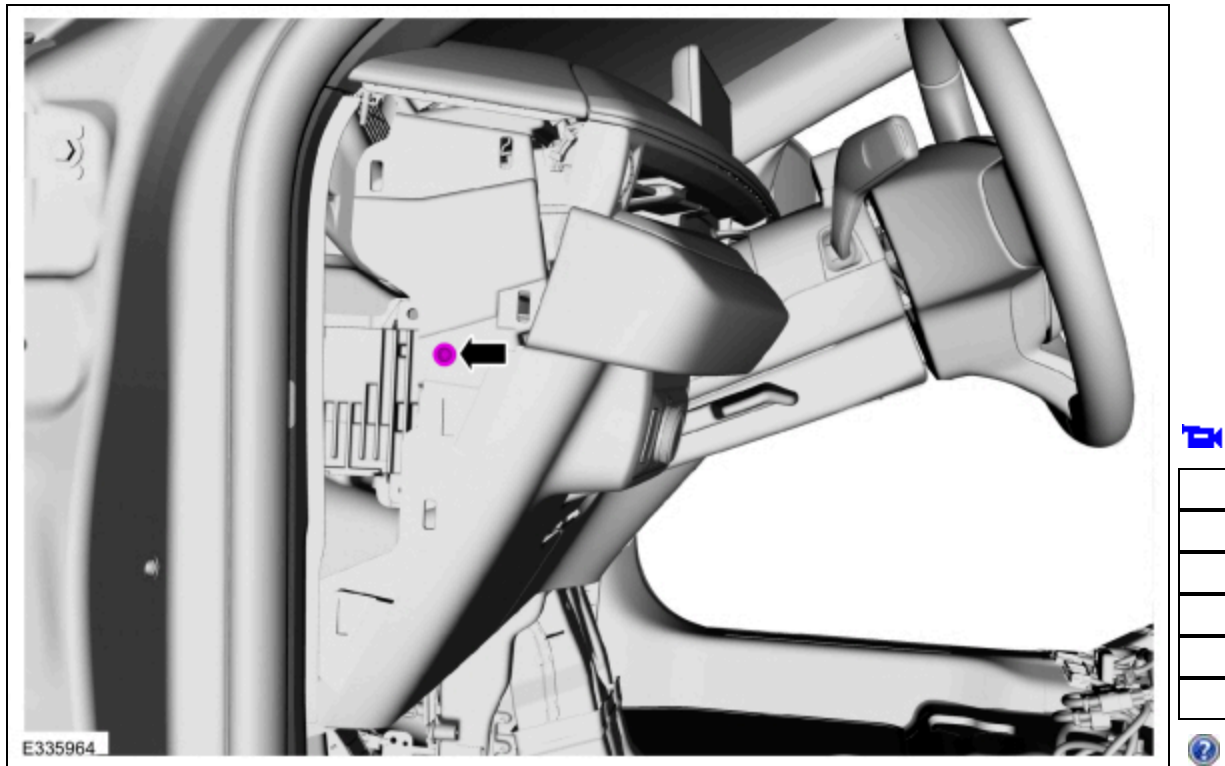


 6. Release the clips and remove the LH instrument panel lower closeout panel.
 - Disconnect the electrical connector.

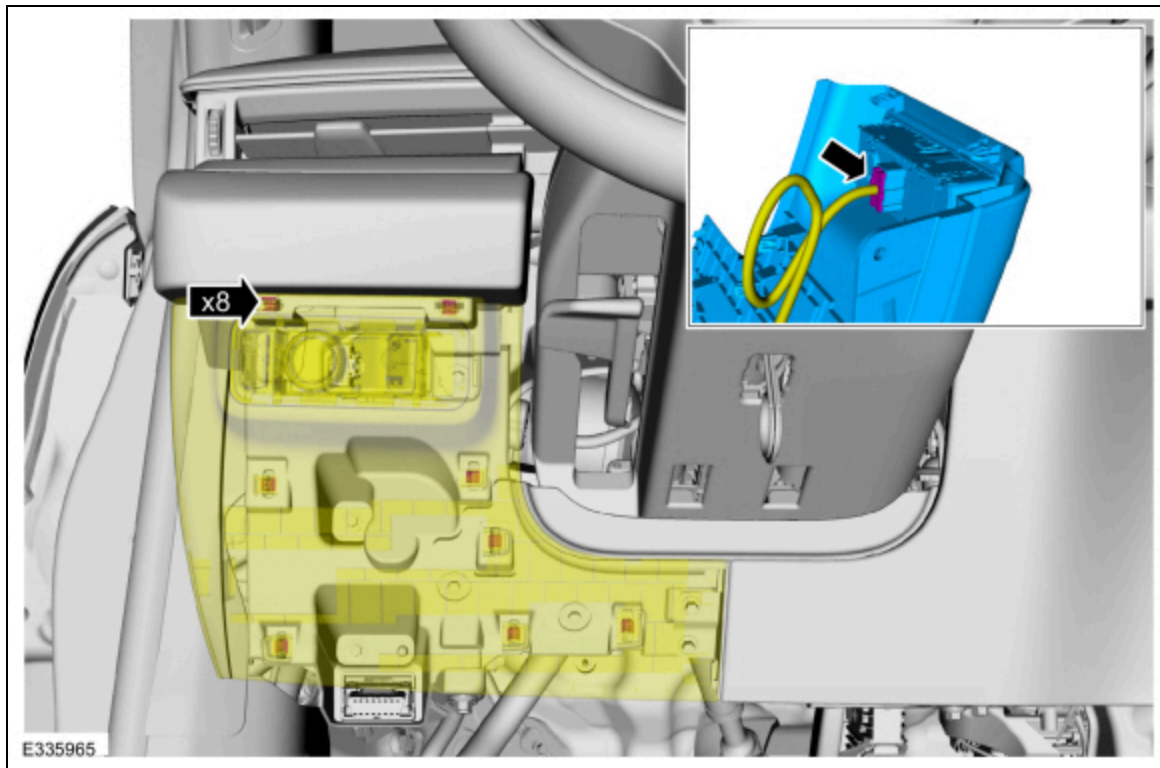


7. **NOTE:** The floor console is shown removed for clarity.


Remove the bolts, release the clips and remove the RH lower instrument panel close out panel.
 Torque: 22 lb.in (2.5 Nm)

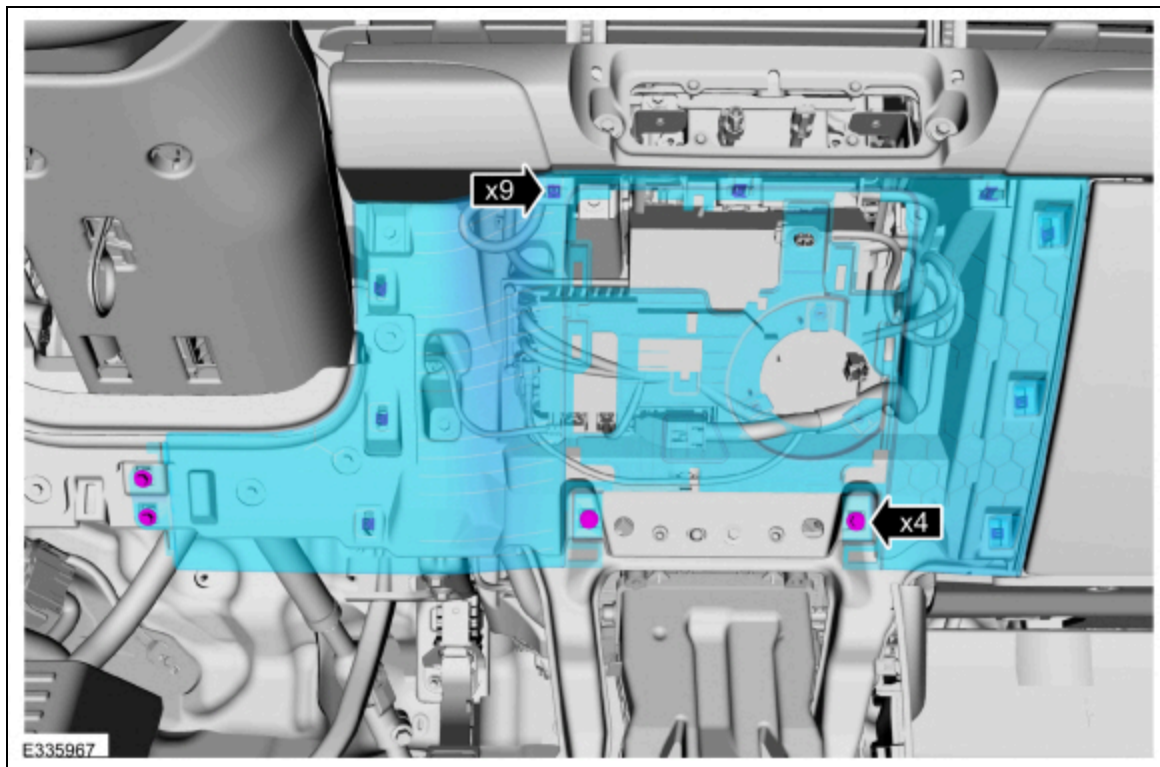

8. Disconnect the electrical connectors.

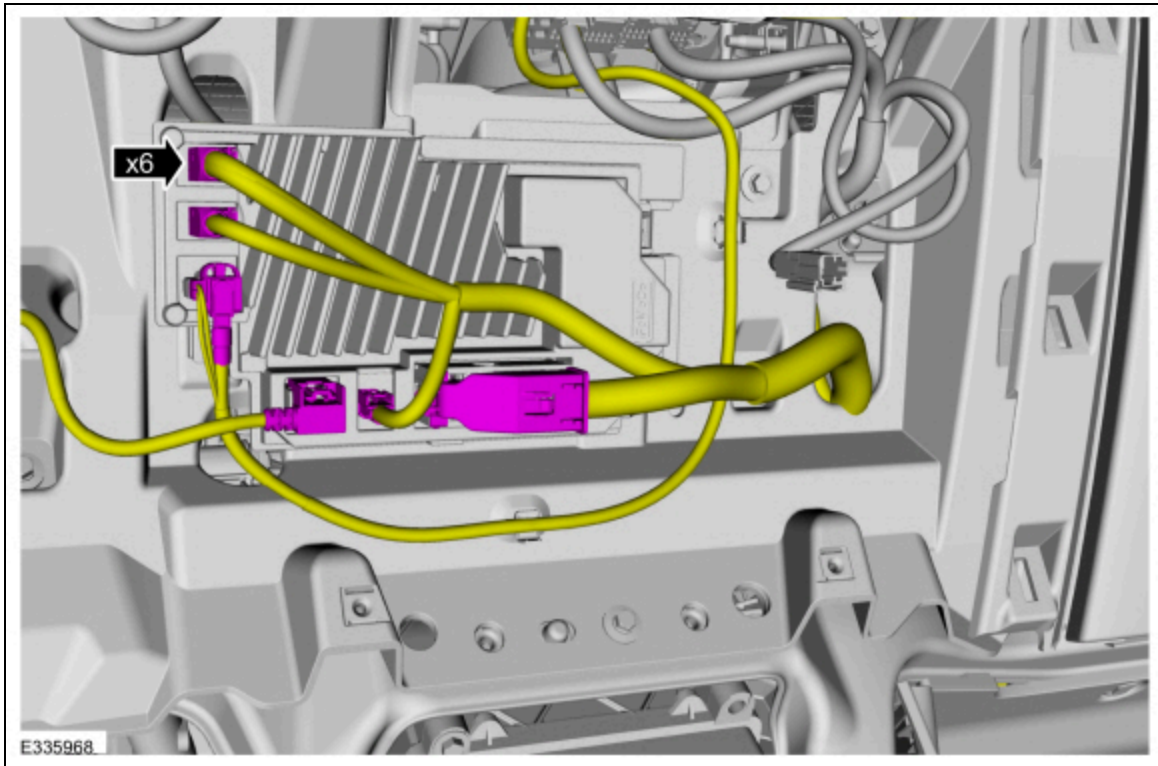

9. Remove the screws and the APIM .

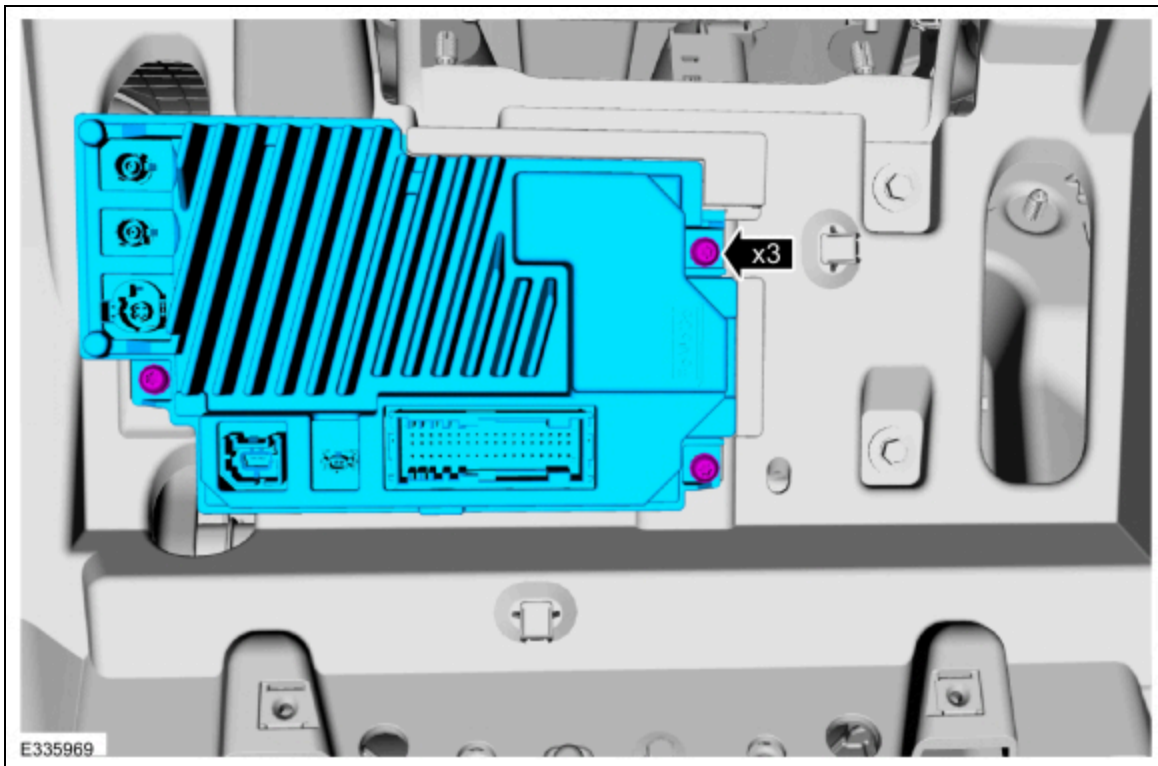

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*

Using a diagnostic scan tool, complete the PMI process for the APIM following the on-screen instructions.

