

Headlamp Assembly




Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: Left hand side shown, right hand side similar.

1. Remove the front bumper cover.
Refer to: [Front Bumper Cover](#) (501-19 Bumpers, Removal and Installation).
2. Remove the headlamp assembly bolts.
Torque: 28 lb.in (3.2 Nm)

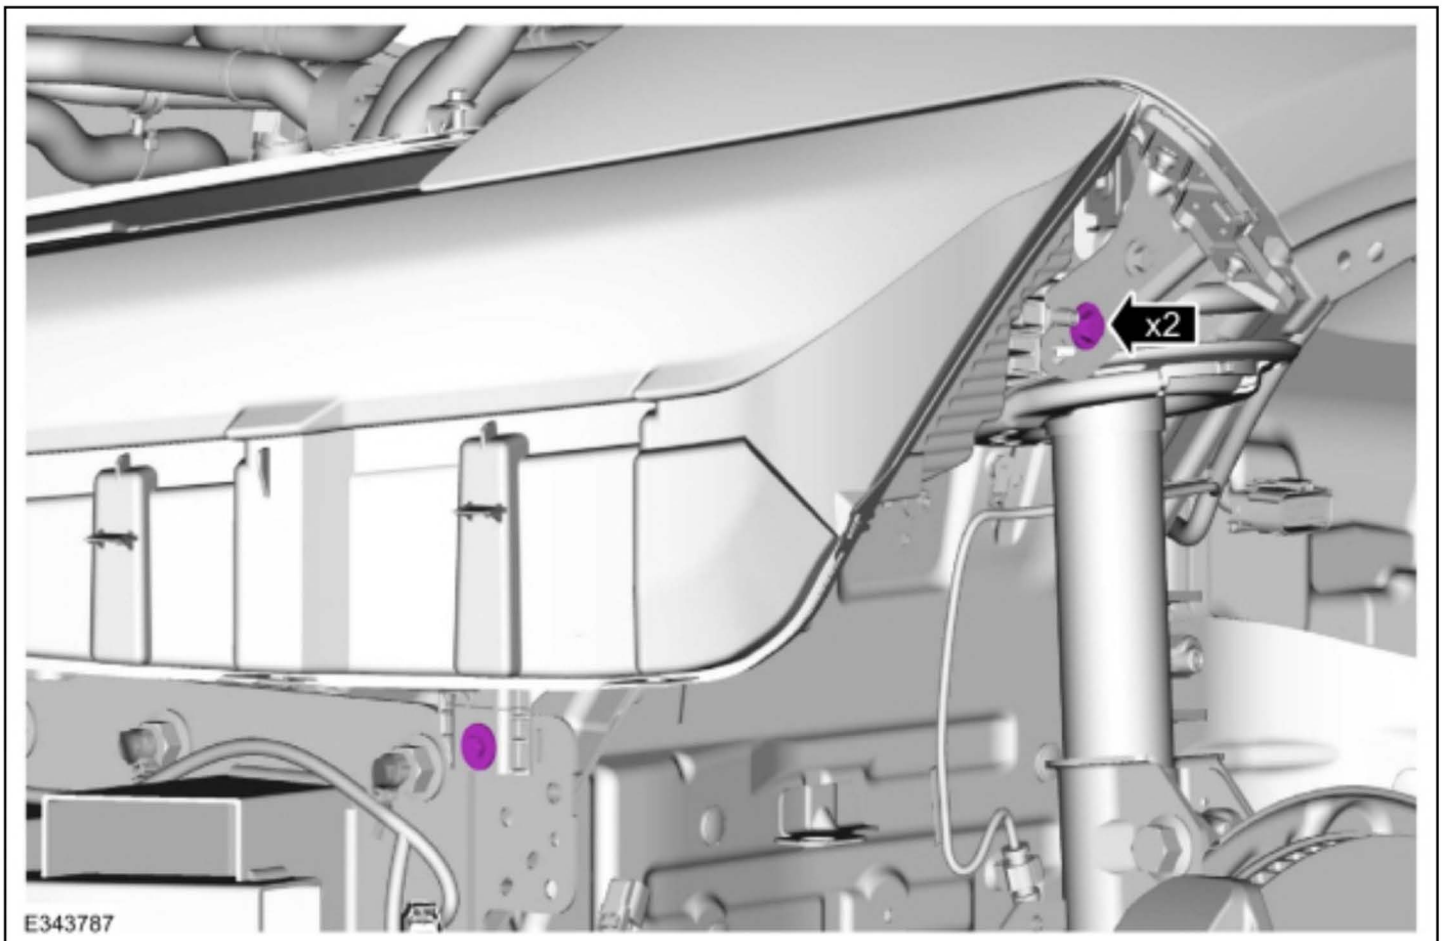


3. Remove the headlamp assembly bolts and position out the headlamp assembly.
Torque: 28 lb.in (3.2 Nm)



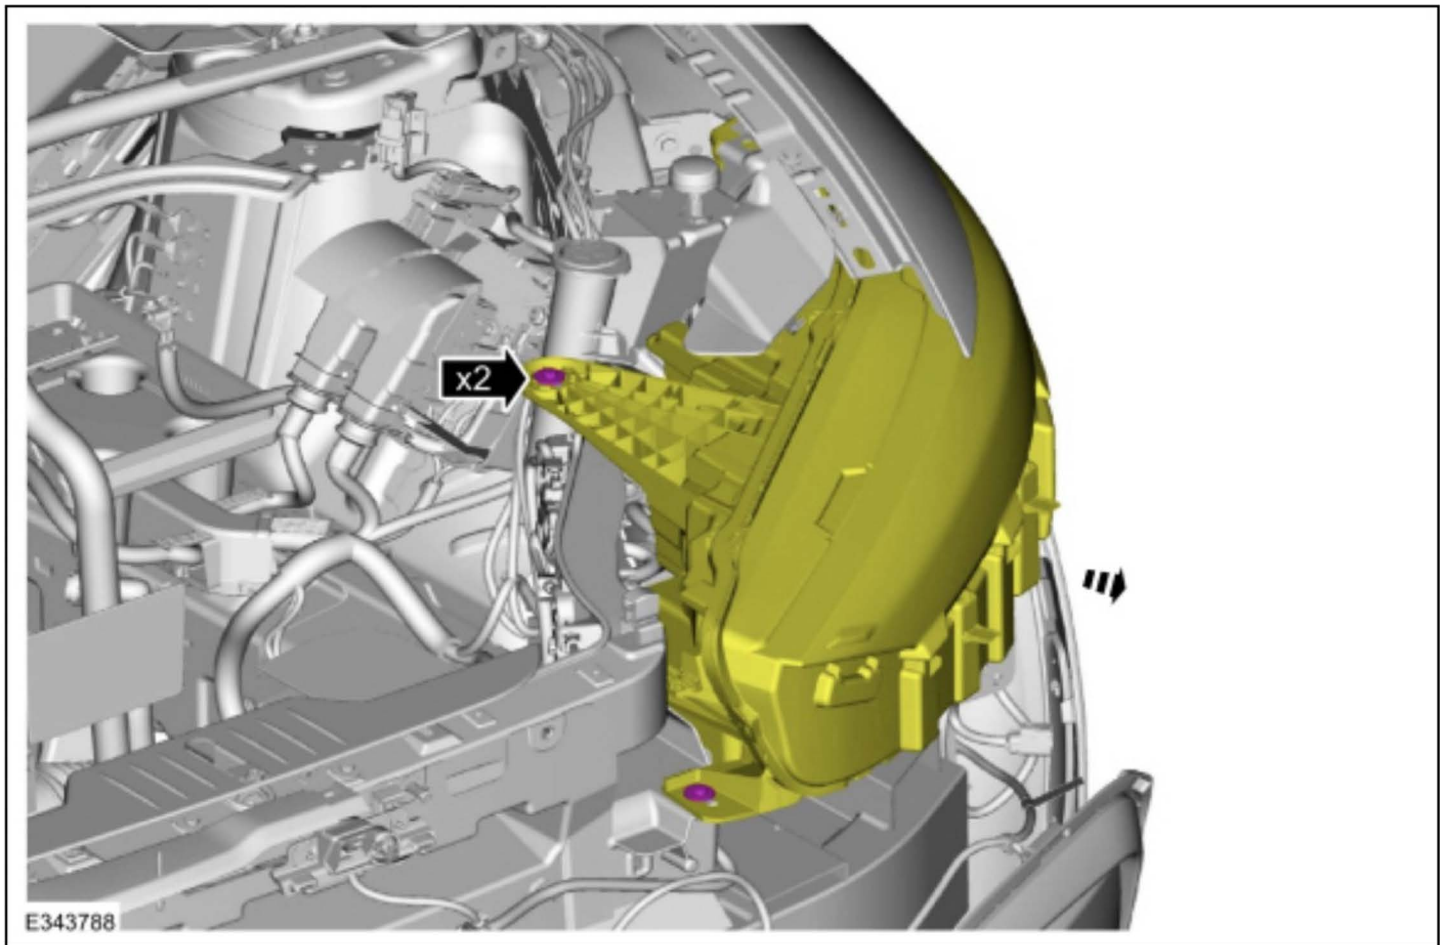

4. Disconnect the headlamp assembly electrical connector and remove the headlamp assembly.

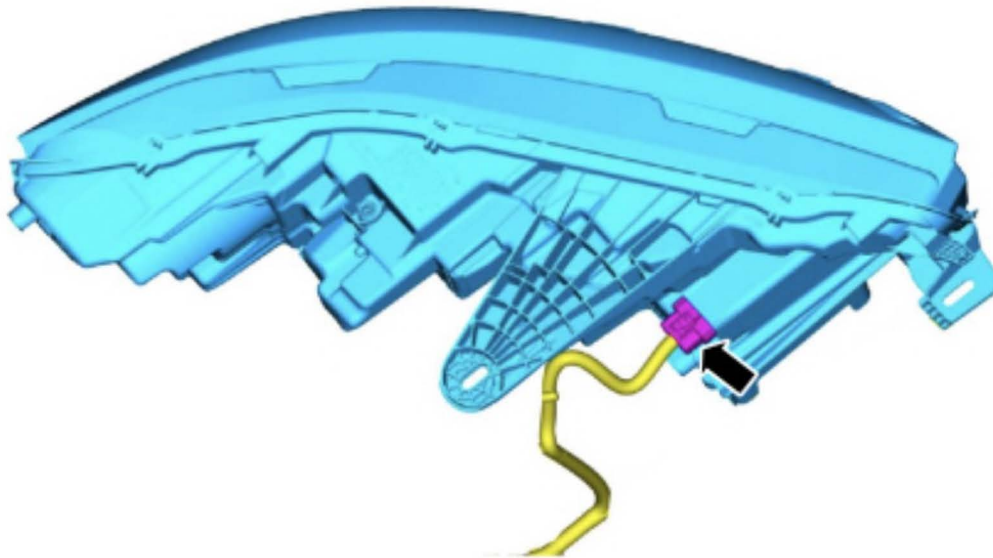

E343789



Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*

Adjust the headlamp assembly.

Refer to: [Headlamp Adjustment](#) (417-01 Exterior Lighting, General Procedures).

Front Bumper Cover




Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the front wheels and tires.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
2. Remove the underhood storage compartment.
Refer to: Underhood Storage Compartment (501-02 Front End Body Panels, Removal and Installation).
3. On both sides.
Remove the screws, the push pins, release the tabs and remove the stone deflector.
Use the General Equipment: Interior Trim Remover
Torque: 18 lb.in (2 Nm)

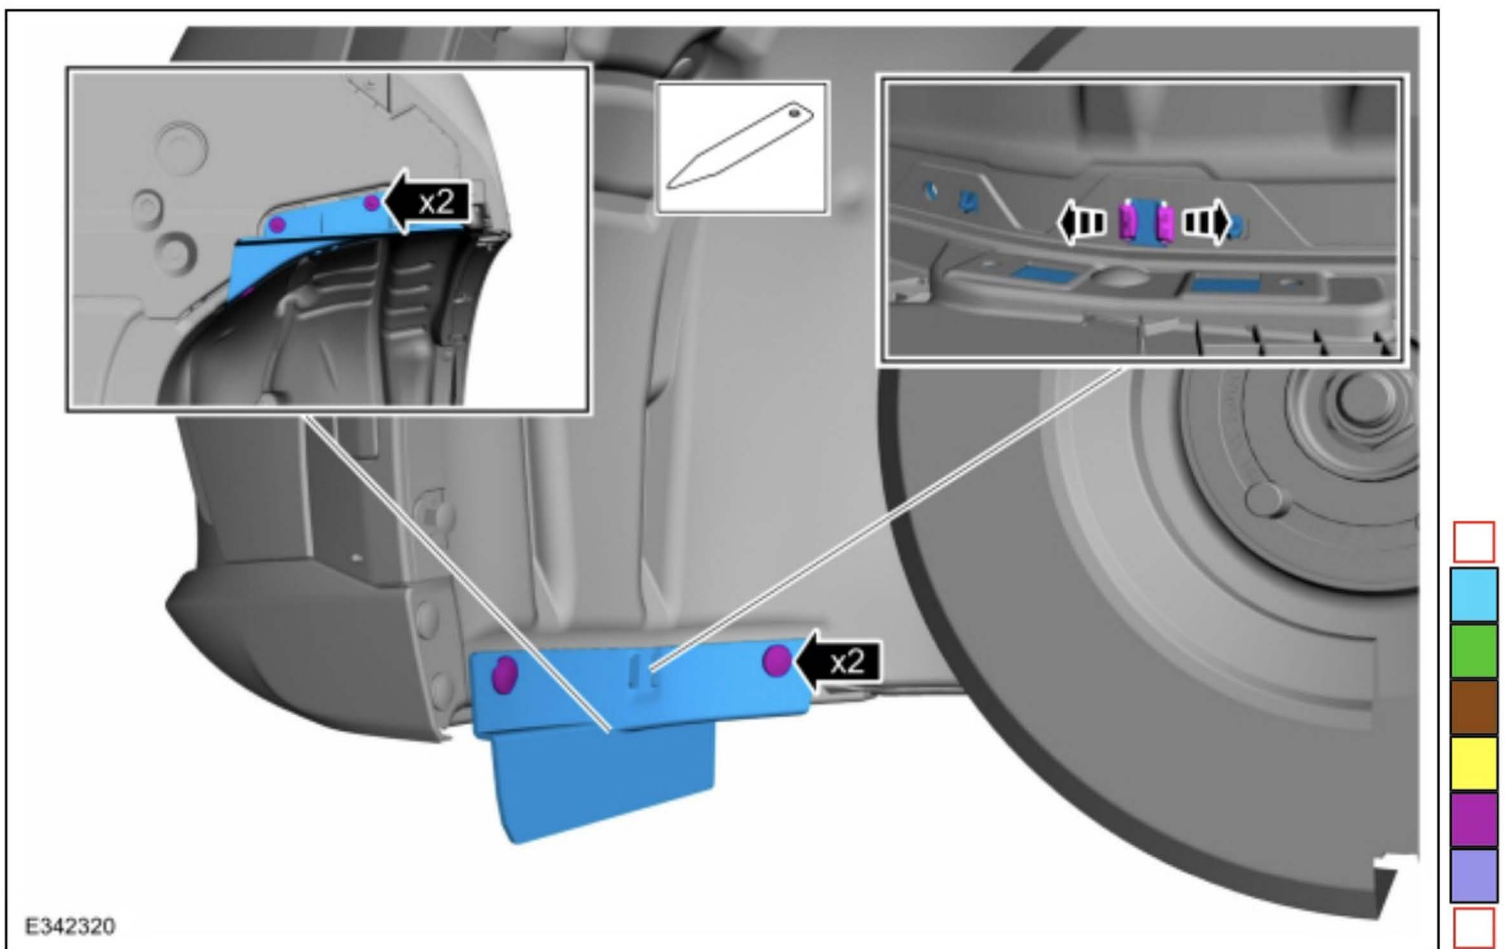


4. On both sides.
Remove the push pins, release the tabs and position front fender moulding aside.
Use the General Equipment: Interior Trim Remover

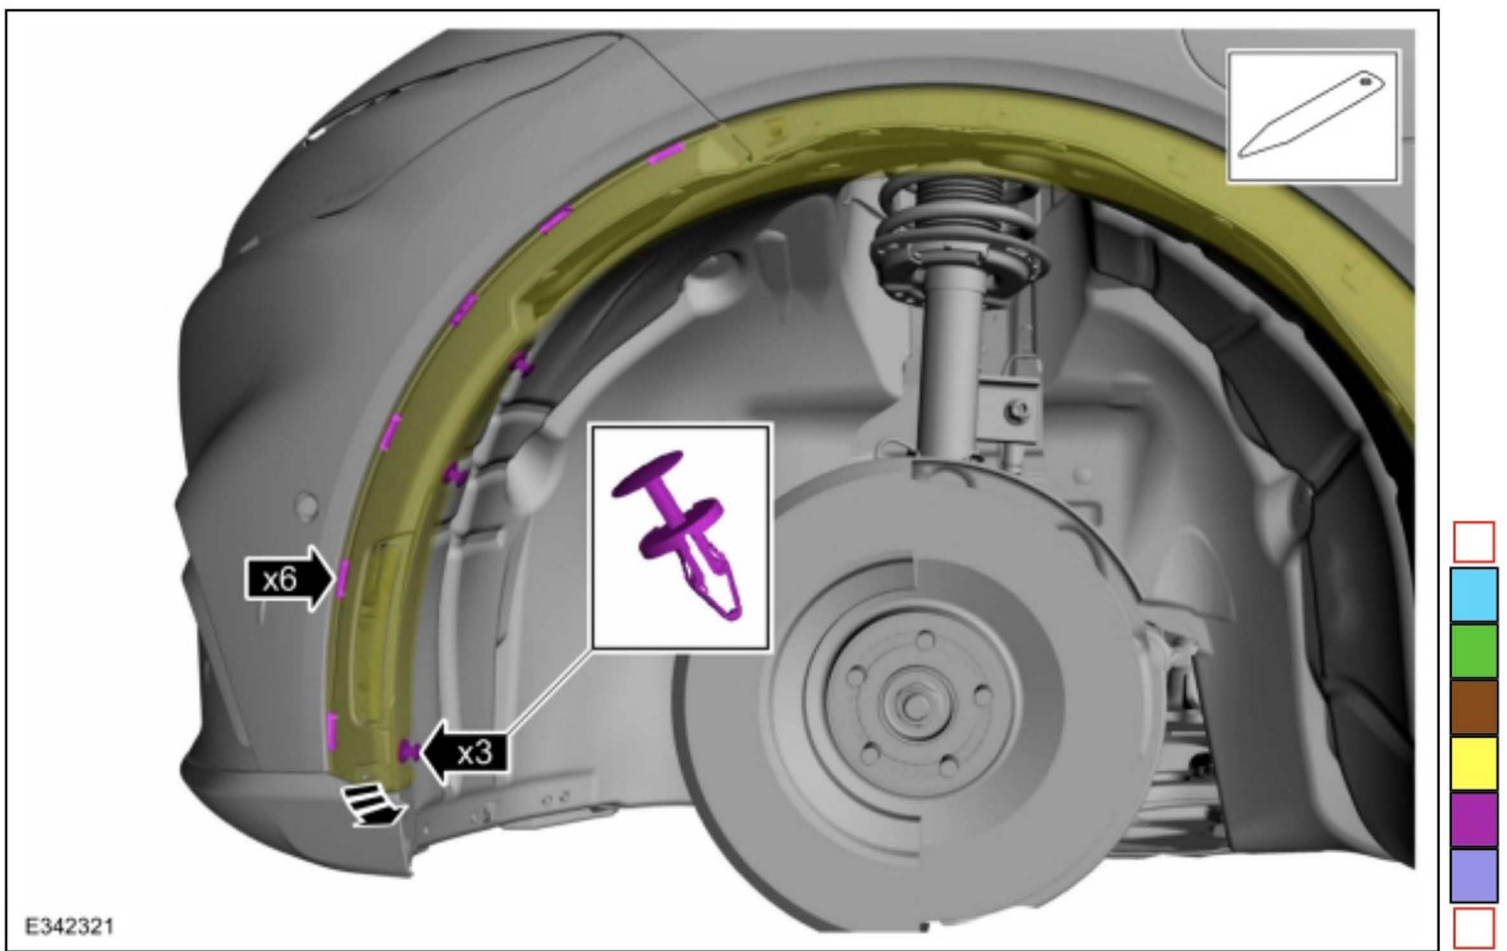

5. On both sides.
Remove the push pins and position the fender splash shield aside.

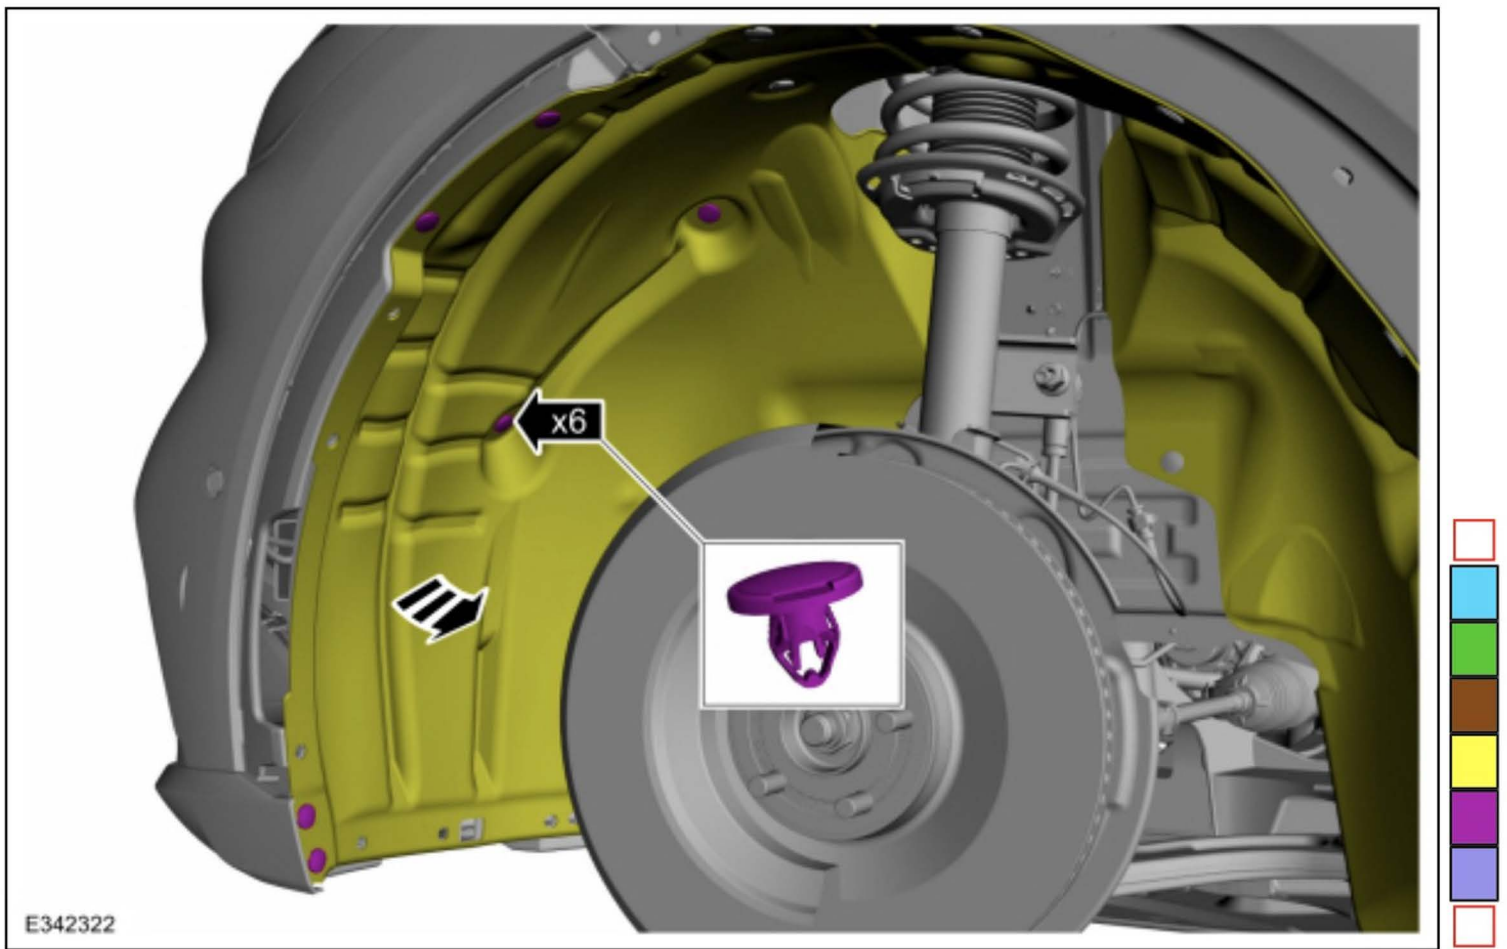


6. Disconnect the camera washer hose and plug the washer hose end. Remove the clips and position the washer hose assembly aside.

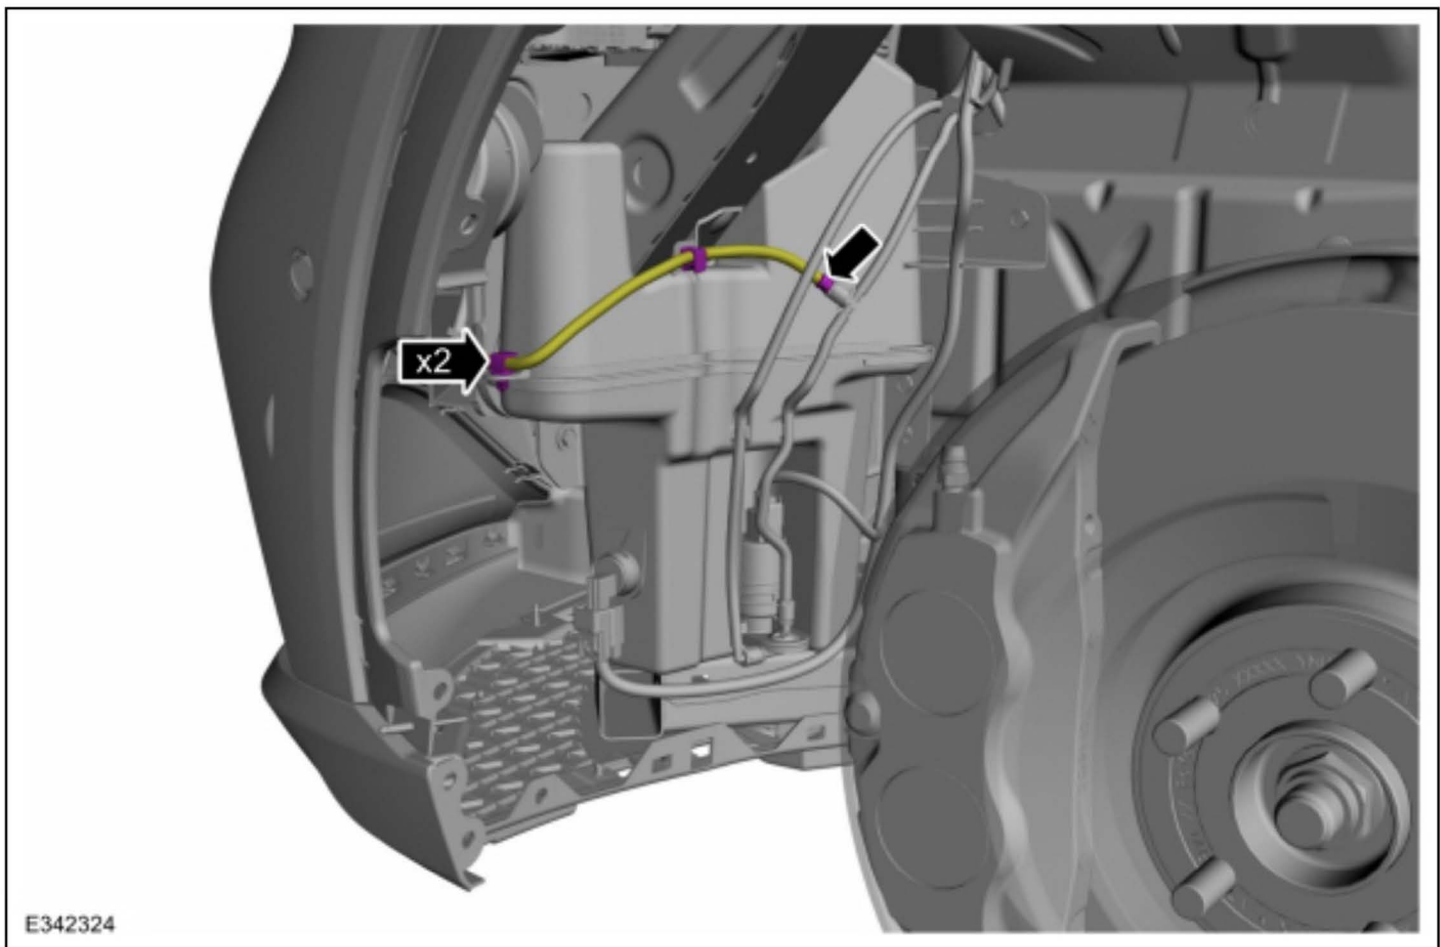


7.


1. Disconnect the front bumper cover harness electrical connectors.
2. Disconnect the front camera harness electrical connector.
3. Remove the retainer and position the wiring harness aside.

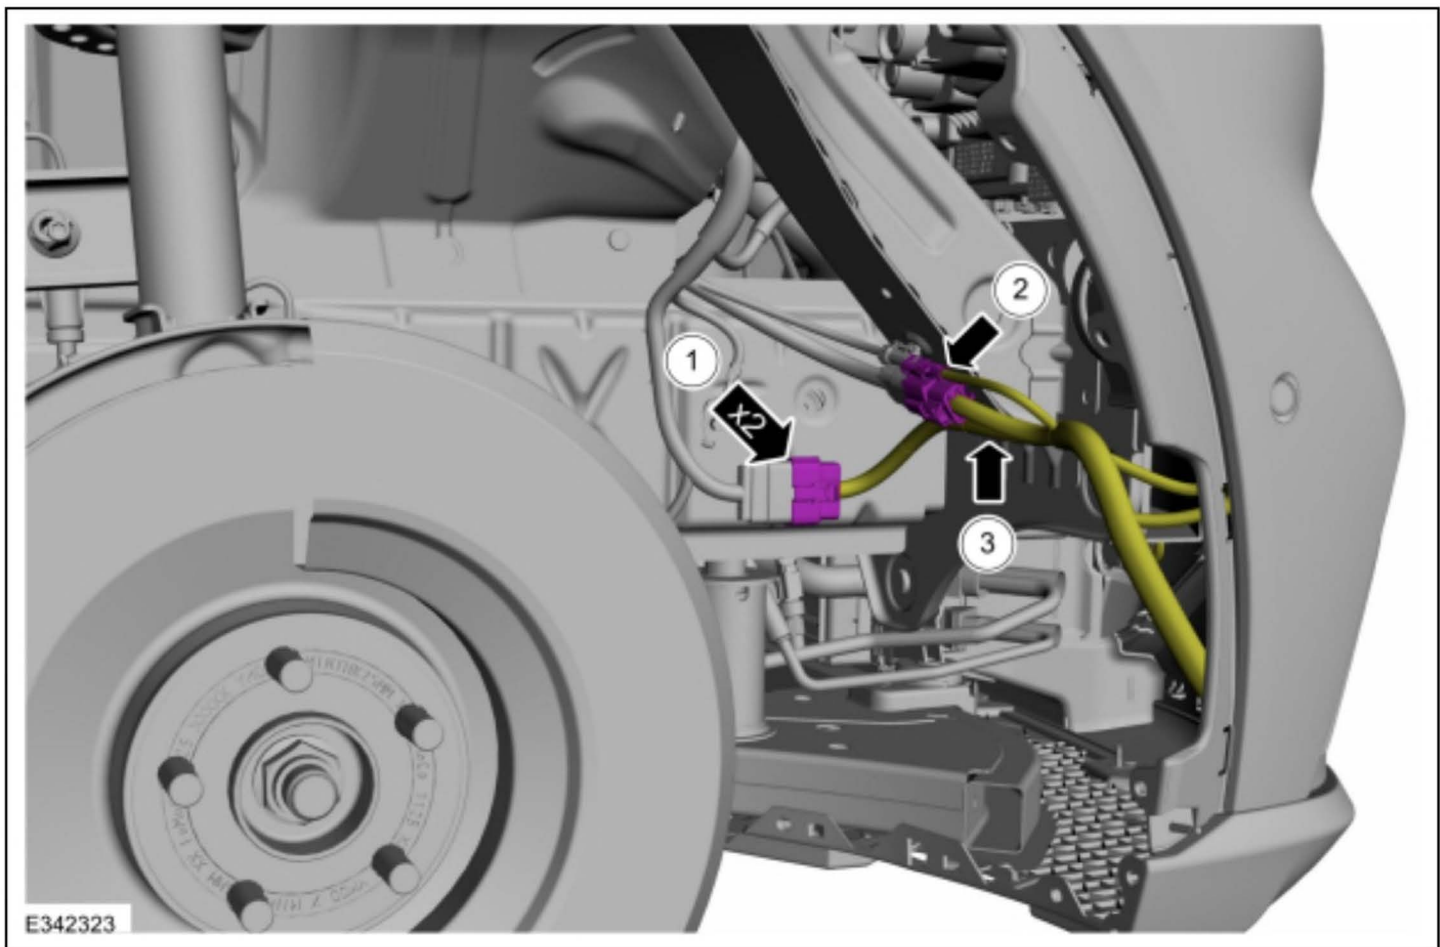

8. Remove the push pins, the screws and the lower air deflector.
Torque: 18 lb.in (2 Nm)

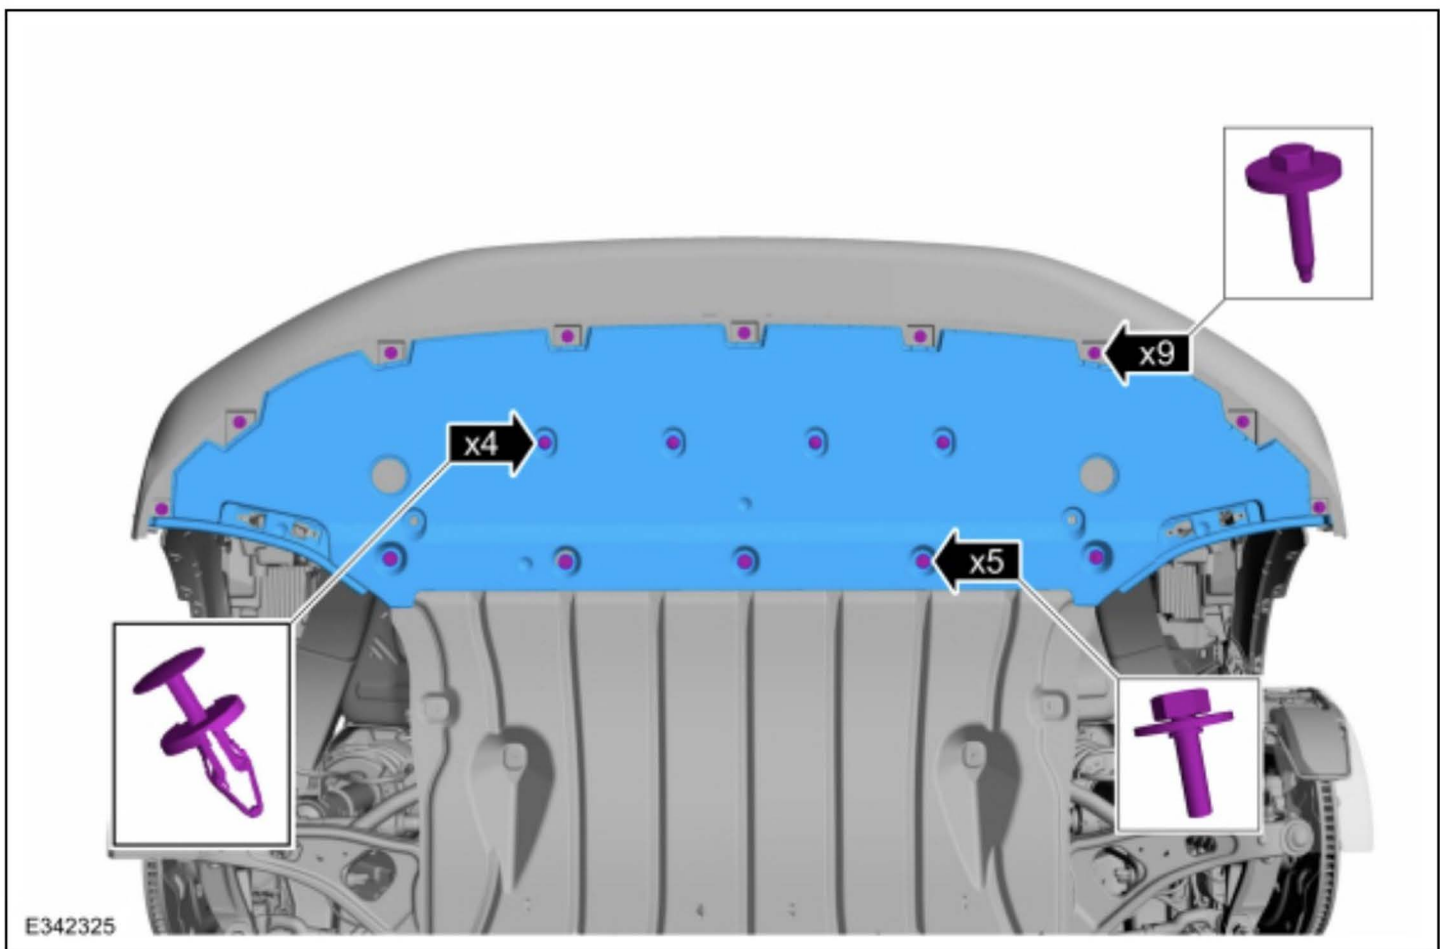

9. On both sides.
Remove the front bumper cover to fender bolts and release the tab.
Torque: 53 lb.in (6 Nm)

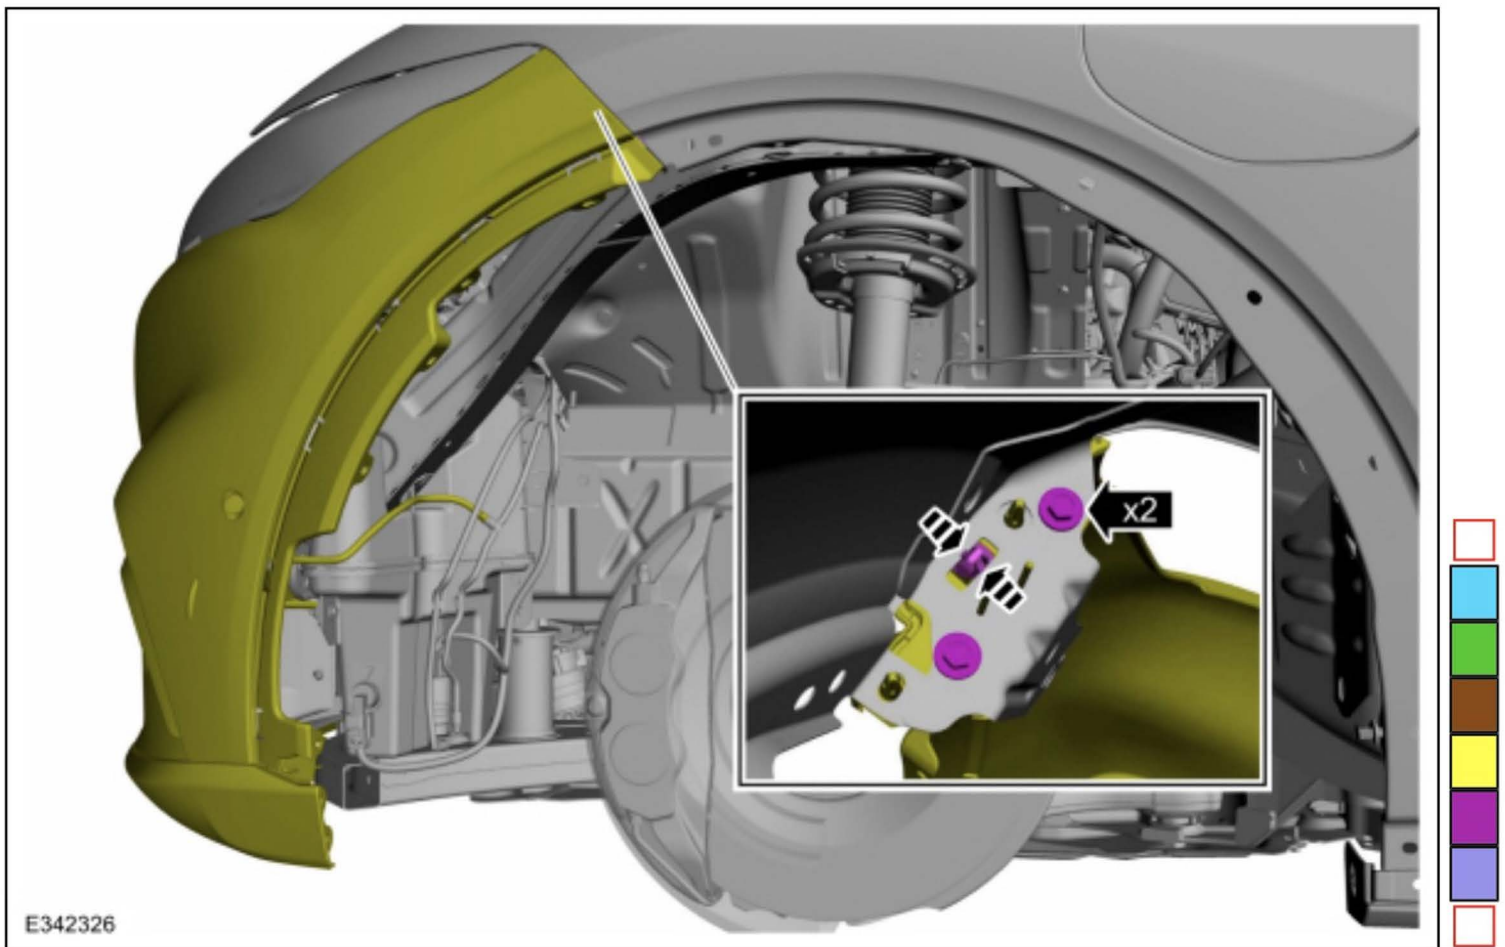


E342326

10. **NOTE:** *This step requires the aid of another technician.*

Remove the front bumper cover.

1. Remove the screws.
Torque: 27 lb.in (3 Nm)
2. Release the clips.
3. Lift the front bumper cover up and off the alignment pins.

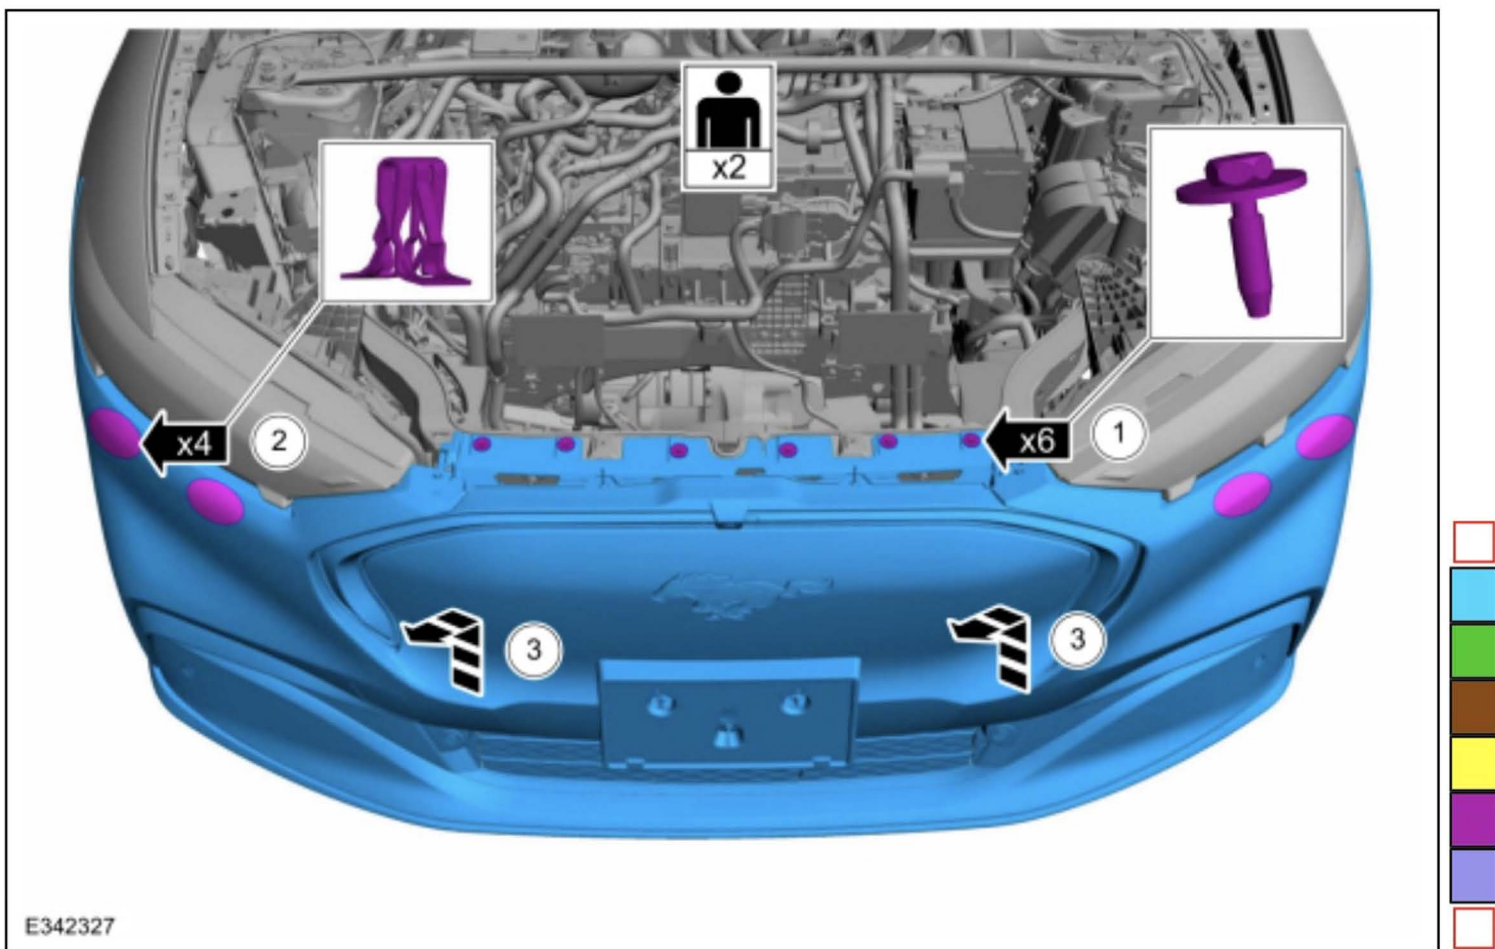

Installation

All vehicles

1. To install, reverse the removal procedure.

Vehicles With: 360 Degree Camera

2. Align the 360° cameras.
Refer to: 360 Degree View Camera Alignment (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).

Vehicles With: Active Park Assist/Front Parking Aid

3. If replacing the front bumper cover.
Check the alignment of the front active park assist and front parking aid sensors.
Refer to: Azimuth System Check (413-13C Parking Aid - Vehicles With: Active Park Assist, General Procedures).
Refer to: Azimuth System Check (413-13A Parking Aid - Vehicles With: Rear Parking Aid, General Procedures).
Refer to: Elevation System Check (413-13A Parking Aid - Vehicles With: Rear Parking Aid, General Procedures).
4. If any sensor fails the check, diagnose the sensor fault.